


ltem	Part Number	Description	
Bowls			
А	100-009ORG-R	Orange ABS Plastic Bowl	
	100-009GRN-R	Green ABS Plastic Bowl	
	100-009YEL-R	Yellow ABS Plastic Bowl	
	100-008R	Stainless Steel Bowl	
	AP100-011A	Stn. Stl. Flanged Bowl For Deck Mount	

	Drain	in Plate Assemblies		
	В	AP150-012A	Drain Plate Assembly for Plastic Bowls	
		AP150-012B	Drain Plate Assembly for Stainless Bowls	
Note: Includes Drain Plate, Cupped Washer, And Gasket				

Waste	te Receptors		
С	150-014E-2	Cast Aluminum Waste Receptor for Wall Mount Units	
	150-066-2	Cast Aluminum Waste Receptor for Pedestal Units	

Ball Valve Assemblies			
D	AP600-101H	1/2" IPS Stay-Open Chrome Plated Brass Ball Valve with Flag Handle, Horizontal	
	AP600-101V	1/2" IPS Stay-Open Chrome Plated Brass Ball Valve with Flag Handle, Vertical	
	AP600-101H-HFC	1/2" IPS Stay-Open Chrome Plated Brass Ball Valve with Flag Handle, for Hand/Foot Control, Horizontal	
	AP600-101V-HFC	1/2" IPS Stay-Open Chrome Plated Brass Ball Valve with Flag Handle, for Hand/Foot Control, Vertical	
	AP600-104	1/2" IPS Brass Stay-Open Ball Valve, Push- Down Control	
E	AP050-010	Stainless Steel Foot Treadle and Return Spring with Aluminum Clevis Pin	
F	150-032	Powder Coated Cast Aluminum Floor Flange, 1-1/4" NPT Female Connection	
G	AP470-001	GS-Plus™ Spray Head Assy.	
Н	AP470-100R	(2) GS-Plus [™] Spray Heads with Chrome Plated Brass Fittings	
I	BI136-02-04	3/8" IPS X 2-1/4" Brass Shank	

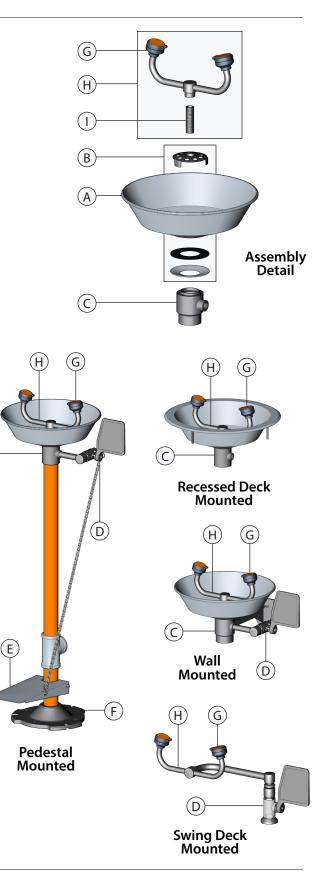

(c)


WaterSaver Faucet 701 W Erie St Chicago, IL 60654 rev. 0115 / © 2015 Watersaver Faucet Co.




This WaterSaver product is equipped with GS-Plus[™] spray heads. Each head features:

- Tough polypropylene plastic construction
- Highly visible integrated nylon dust cover
- Easily accessible 1.8 GPM flow control
- Dense (60 pore per inch) polyurethane filter
- Unique design provides a consistently soft, full spray of water across a range of working pressures from 30 to 100 PSI.

Item	Part Number	Description
Α	AP470-001	GS-Plus [™] Spray Head (assembled)
В	AP470-002R	Dust Cover and Cap Assembly
С	470-004R	60 PPI Polyurethane Filter
D	470-005R	1.8 GPM Flow Control

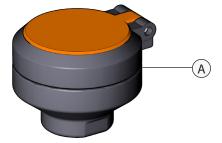

 






IMPORTANT

 In order to operate properly, the flow control must be inserted into the body *concave end first*.



312 666 5500 telephone 312 666 5501 facsimile wsflab.com (D)




To perform weekly cleaning of the strainer:

- 1. Unscrew the strainer bonnet (a).
- 2. Inspect the o-ring (b) for for damage. Replace if needed.
- 3. Remove cylindrical screen (c) and rinse under clean water. Gently rub the screen until all debris has been removed.
- 4. Carefully reinsert screen into the counterbore within the strainer body (should fit snugly).
- 5. Replace strainer bonnet and test for proper operation of strainer and eye wash.

Important:

All emergency equipment must be inspected and tested at least weekly to ensure proper operation. On units equipped with an in-line strainer, weekly inspection should also include checking the strainer for accumulation of debris or foreign matter. Such debris can impair the flow of water through the strainer and prevent the eye wash from functioning properly.

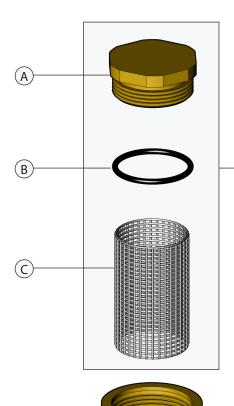

Repair Kit for Inline Strainer consisting of bonnet, O-Ring and 50 Mesh Cylindrical Screen

RK400-013



AP400-013

WaterSaver Faucet 701 W Erie St Chicago, IL 60654 312 666 5500 telephone 312 666 5501 facsimile wsflab.com