


QCDL Series Quick Connect Plugs - Locking

WaterSaver keyed quick connect fittings are designed specifically for laboratory applications. They are designed to provide maximum performance and durability for the life of the lab installation.

Features of WaterSaver keyed quick connect locking plugs include the following:

- Quick connect plugs are available in either polished chrome plated brass or Type 316 stainless steel.
- Plugs have an internal shut-off valve that closes when the valve is disengaged. Internal valve components are stainless steel to assure compatibility with the service and to assure durable performance.
- Quick connects are certified by CSA International for use with natural gas.
- The quick connect keying system is based upon the inner and outer diameters of the sleeves on the body and plug. Therefore, quick connect plugs can be assembled only into the correct body. There is no possibility of inadvertently mixing services.
- Quick connect bodies and plugs are color coded to designate the service and to facilitate matching the correct body and plug.
- Quick connect locking plugs are furnished with an internal locking feature. The plug can be installed in the body only in a fixed orientation. Locking feature permits proper orientation of valves and other fittings connected to the plug.
- Quick connect plugs are available with a choice of outlet connections for maximum flexibility.


QCDL - - 3M - K

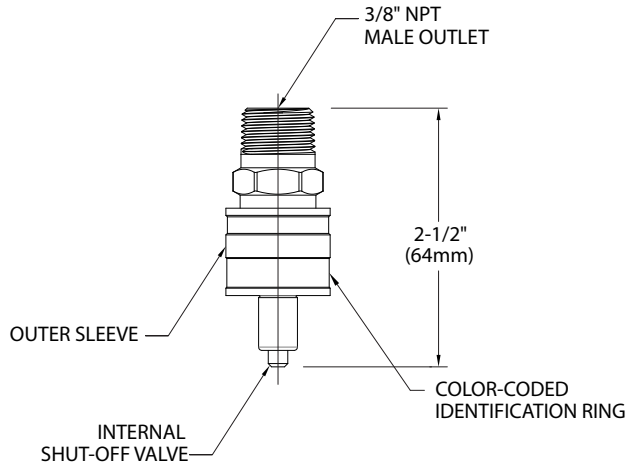

Locking Plugs - 3/8" NPT Male Outlet

Key Color	Brass	Stainless Steel
BLACK	QCDL-B-3M-K1	QCDL-SS-3M-K1
ORANGE	QCDL-B-3M-K2	QCDL-SS-3M-K2
GREEN	QCDL-B-3M-K3	QCDL-SS-3M-K3
YELLOW	QCDL-B-3M-K4	QCDL-SS-3M-K4
BLUE	QCDL-B-3M-K5	QCDL-SS-3M-K5
WHITE	QCDL-B-3M-K6	QCDL-SS-3M-K6
PURPLE	QCDL-B-3M-K7	QCDL-SS-3M-K7
BROWN	QCDL-B-3M-K8	QCDL-SS-3M-K8


QCDL - - 3F - K

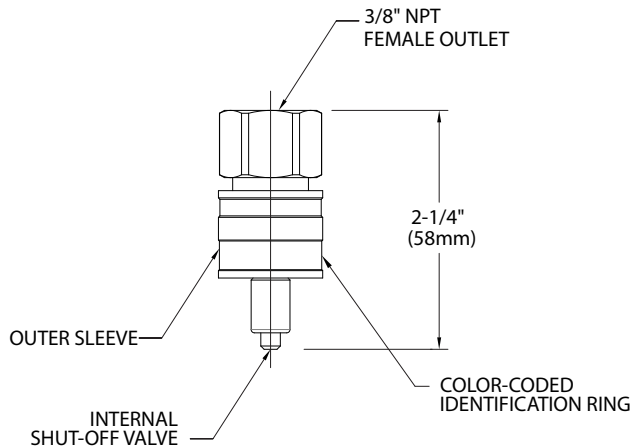

Locking Plugs - 3/8" NPT Female Outlet

Key Color	Brass	Stainless Steel
BLACK	QCDL-B-3F-K1	QCDL-SS-3F-K1
ORANGE	QCDL-B-3F-K2	QCDL-SS-3F-K2
GREEN	QCDL-B-3F-K3	QCDL-SS-3F-K3
YELLOW	QCDL-B-3F-K4	QCDL-SS-3F-K4
BLUE	QCDL-B-3F-K5	QCDL-SS-3F-K5
WHITE	QCDL-B-3F-K6	QCDL-SS-3F-K6
PURPLE	QCDL-B-3F-K7	QCDL-SS-3F-K7
BROWN	QCDL-B-3F-K8	QCDL-SS-3F-K8

QCDL - - 3C - K

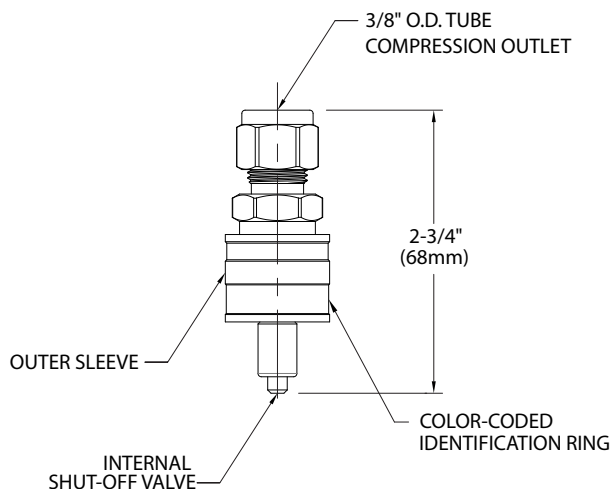

Locking Plugs - 3/8" OD Compression Outlet

Key Color	Brass	Stainless Steel
BLACK	QCDL-B-3C-K1	QCDL-SS-3C-K1
ORANGE	QCDL-B-3C-K2	QCDL-SS-3C-K2
GREEN	QCDL-B-3C-K3	QCDL-SS-3C-K3
YELLOW	QCDL-B-3C-K4	QCDL-SS-3C-K4
BLUE	QCDL-B-3C-K5	QCDL-SS-3C-K5
WHITE	QCDL-B-3C-K6	QCDL-SS-3C-K6
PURPLE	QCDL-B-3C-K7	QCDL-SS-3C-K7
BROWN	QCDL-B-3C-K8	QCDL-SS-3C-K8