

### EW1011 Drench Hose Unit, Retrofit Kit

**Application:** Retrofit existing safety stations and wall mounted or pedestal mounted eye and eye/face washes with auxiliary drench hose. Ideal for rinsing any part of user's eye, face, or body. *Note: Under ANSI Z358.1-2014, drench hose units supplement, but do not replace, other types of emergency equipment.*

**Spray Head Assembly:** Single FS-Plus™ spray head. Spray head has 'flip top' dust cover, internal flow control and filter to remove impurities from the water flow.

**Valve:** Forged brass squeeze valve activated by stainless steel lever handle. Valve has replaceable stainless steel seat for exceptional durability. Valve closes when lever handle is released.

**Hose:** 8' reinforced PVC hose. 275 PSI maximum working pressure.

**Mounting:** Wall mount with included steel bracket or pipe mount with included 1-1/4" IPS pipe U-bolts.

**Supply:** 1/2" IPS chrome plated brass tee and 1-1/4" x 1/2" NPT reducing tee included. Connections also include close nipples to facilitate retrofit installation.

**Sign:** ANSI-compliant identification sign.


**Quality Assurance:** Assembled and water tested prior to shipment.

### Available Options

- FSH** 8 ft. flexible stainless steel hose in place of PVC hose.
- LC** Locking clip for valve handle. Valve stays open until locking clip is released.
- VB** In-line vacuum breaker for installation between valve and spray head.



**EW1011** Drench Hose Unit, Retrofit Kit

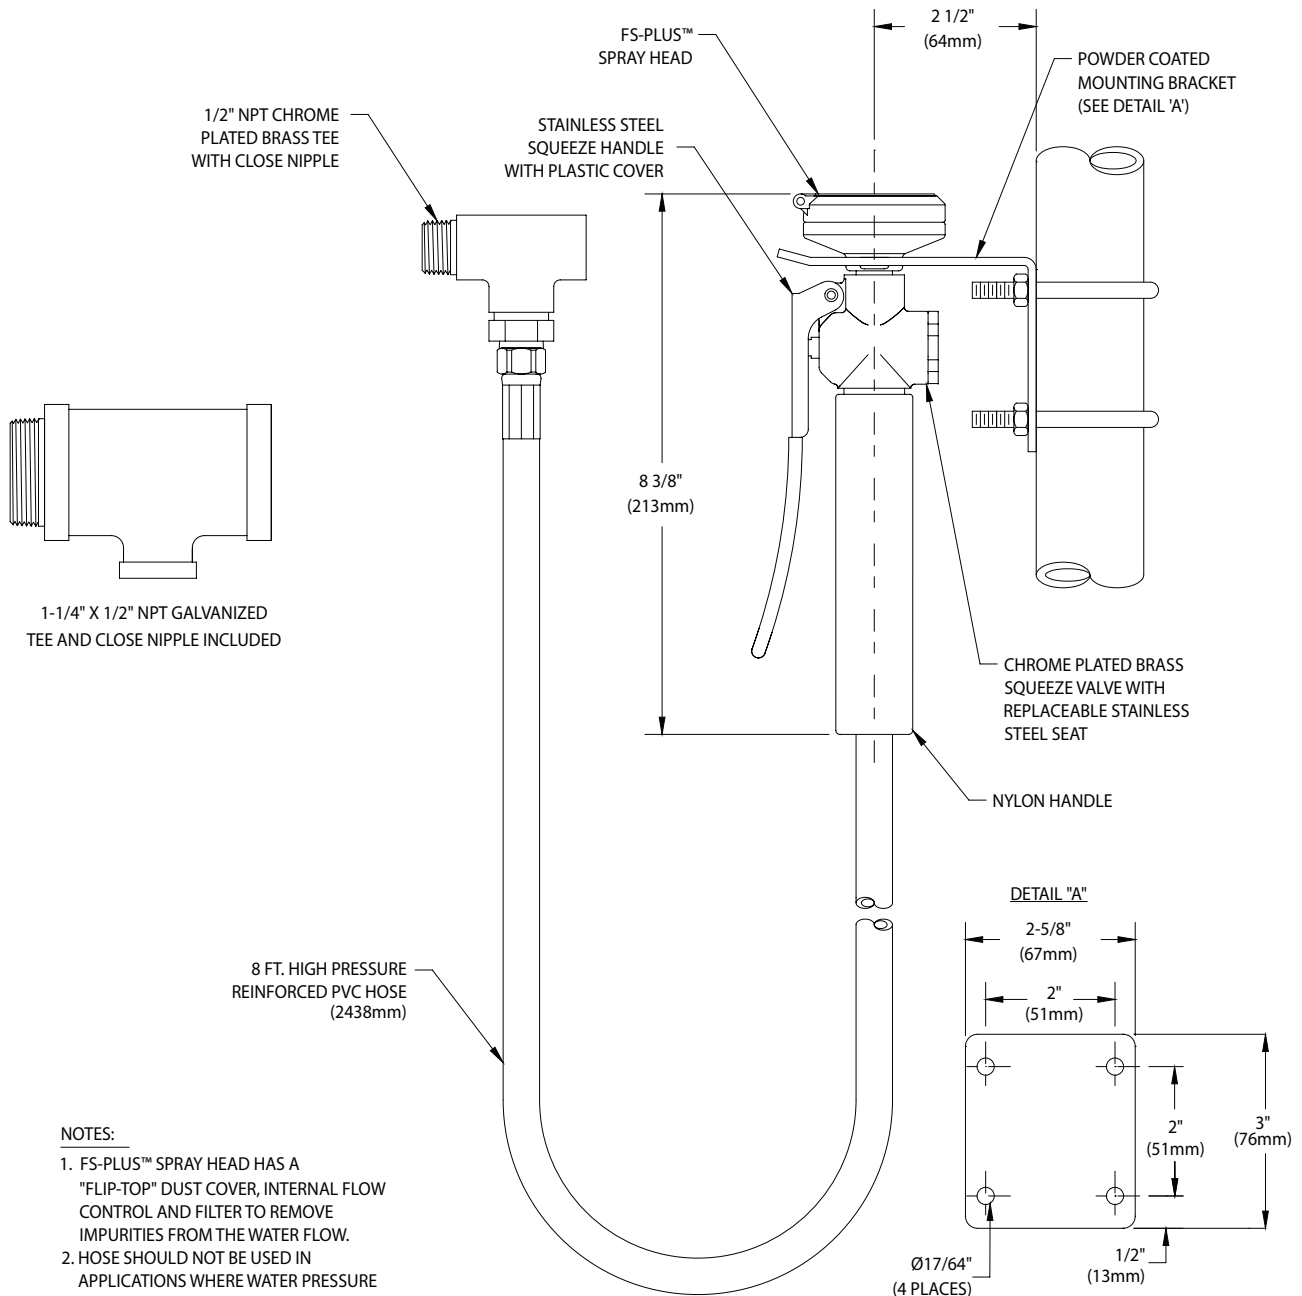

**NOTES:**

1. FS-PLUS™ SPRAY HEAD HAS A "FLIP-TOP" DUST COVER, INTERNAL FLOW CONTROL AND FILTER TO REMOVE IMPURITIES FROM THE WATER FLOW.
2. HOSE SHOULD NOT BE USED IN APPLICATIONS WHERE WATER PRESSURE EXCEEDS 90 PSI. HOSE SHOULD BE INSPECTED PERIODICALLY FOR DETERIORATION.

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 1/4" (6mm). rev. 050219

Sign Included

