

EW1028VB Eyewash/Drench Hose Unit, Deck Mounted, Ball Valve with Flag Handle, with Vacuum Breaker



Application: Dual purpose eyewash/drench hose with ball valve and flag handle for deck mounting. Unit meets the provisions of ANSI Z358.1 -2014 as both an eyewash and a drench hose. Unit may be left in the deck flange for use as a fixed eyewash, leaving user's hands free. Alternatively, unit may be removed for use as a drench hose to rinse any part of user's eyes, face or body. Vacuum breaker prevents external water and contaminants from seeping back into supply line.

Spray Head Assembly: Two GS-Plus™ spray heads mounted side-by-side. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from the water flow.

Valve: 1/2" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals.

Vacuum Breaker: Atmospheric vacuum breaker installed on outlet of valve. Vacuum breaker is installed 6" above counter. Vacuum breaker is certified to comply with ASSE 1001/CSA-B64. **Note:** Check with code authority for compliance with local plumbing code.

Hose: 8' reinforced PVC hose. 275 PSI maximum working pressure.

Mounting: Eyewash assembly has deck flange for countertop mounting. Flange has handle locator guide to position spray heads facing forward at all times.

Supply: 1/2" NPT male inlet.


Sign: ANSI-compliant identification sign.

Quality Assurance: Unit is completely assembled and water tested prior to shipment.

Available Options

- TM6020** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product selection information.
- DC** Stainless steel dust cover for each spray head.
- FSH** 8 ft. flexible stainless steel hose in place of PVC hose.
- HG** Undercounter hose guide bracket to prevent hose from tangling or binding.

EW1028VB Eyewash/Drench Hose Unit, Deck Mounted, Ball Valve with Flag Handle, with Vacuum Breaker

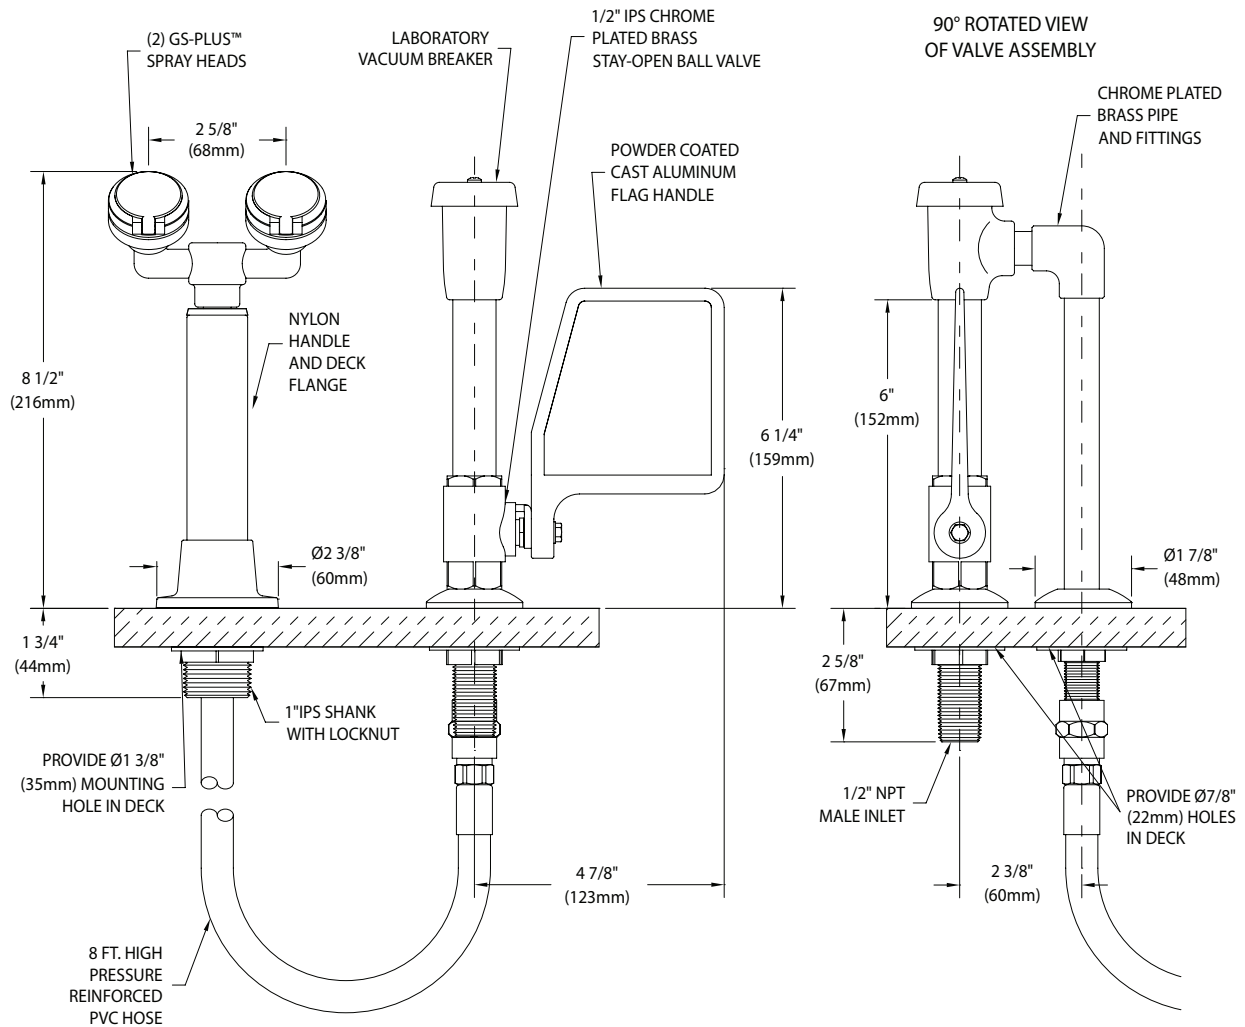

NOTES:

1. EACH GS-PLUS™ SPRAY HEAD HAS A "FLIP-TOP" DUST COVER, INTERNAL FLOW CONTROL AND FILTER TO REMOVE IMPURITIES FROM THE WATER FLOW.
2. HOSE SHOULD NOT BE USED IN APPLICATIONS WHERE WATER PRESSURE EXCEEDS 90 PSI. HOSE SHOULD BE INSPECTED PERIODICALLY FOR DETERIORATION.
3. VACUUM BREAKER IS CERTIFIED TO COMPLY WITH ASSE 1001.

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are $\pm 1/4"$ (6mm). Rev. 0622