

- FE704** WideArea™ Eye/Face Wash, Pedestal Mounted, Stainless Steel Bowl
- FE704P** WideArea™ Eye/Face Wash, Pedestal Mounted, Plastic Bowl

**Application:** Free standing, pedestal mounted WideArea™ eye/face wash. Four GS-Plus™ spray-type outlet heads deliver a flood of water over a wide area of coverage for complete rinsing of eyes and face.

**Spray Head Assembly:** Four GS-Plus™ spray heads. Each head has a “flip top” dust cover, internal flow control and filter to remove impurities from the water flow.

**Valve:** 1/2" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals.

**Bowl:** 11-1/8" diameter stainless steel (FE704) or 11-3/4" diameter orange ABS plastic (FE704P).

**Pipe and Fittings:** Schedule 40 galvanized steel. Furnished with orange polyethylene pipe covers for high visibility and corrosion resistance.

**Supply:** 1/2" NPT female inlet.

**Waste:** 1-1/4" NPT female outlet.

**Sign:** ANSI-compliant identification sign.


**Quality Assurance:** Valve, bowl and spray head assembly is factory assembled and water tested prior to shipment.

### Available Options

- TM6020** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to “Thermostatic Mixing Valves” section for complete technical and product selection information.
- BC** Stainless steel bowl cover (FE704 only). Cover protects unit against contaminants. Cover is automatically raised when unit is activated.
- HFC** Hand and foot control. Eye/face wash is activated by flag handle or foot treadle.
- HS** Auxiliary hand-held drench hose for rinsing eyes, face or body.



- FE704** WideArea™ Eye/Face Wash, Pedestal Mounted, Stainless Steel Bowl
- FE704P** WideArea™ Eye/Face Wash, Pedestal Mounted, Plastic Bowl

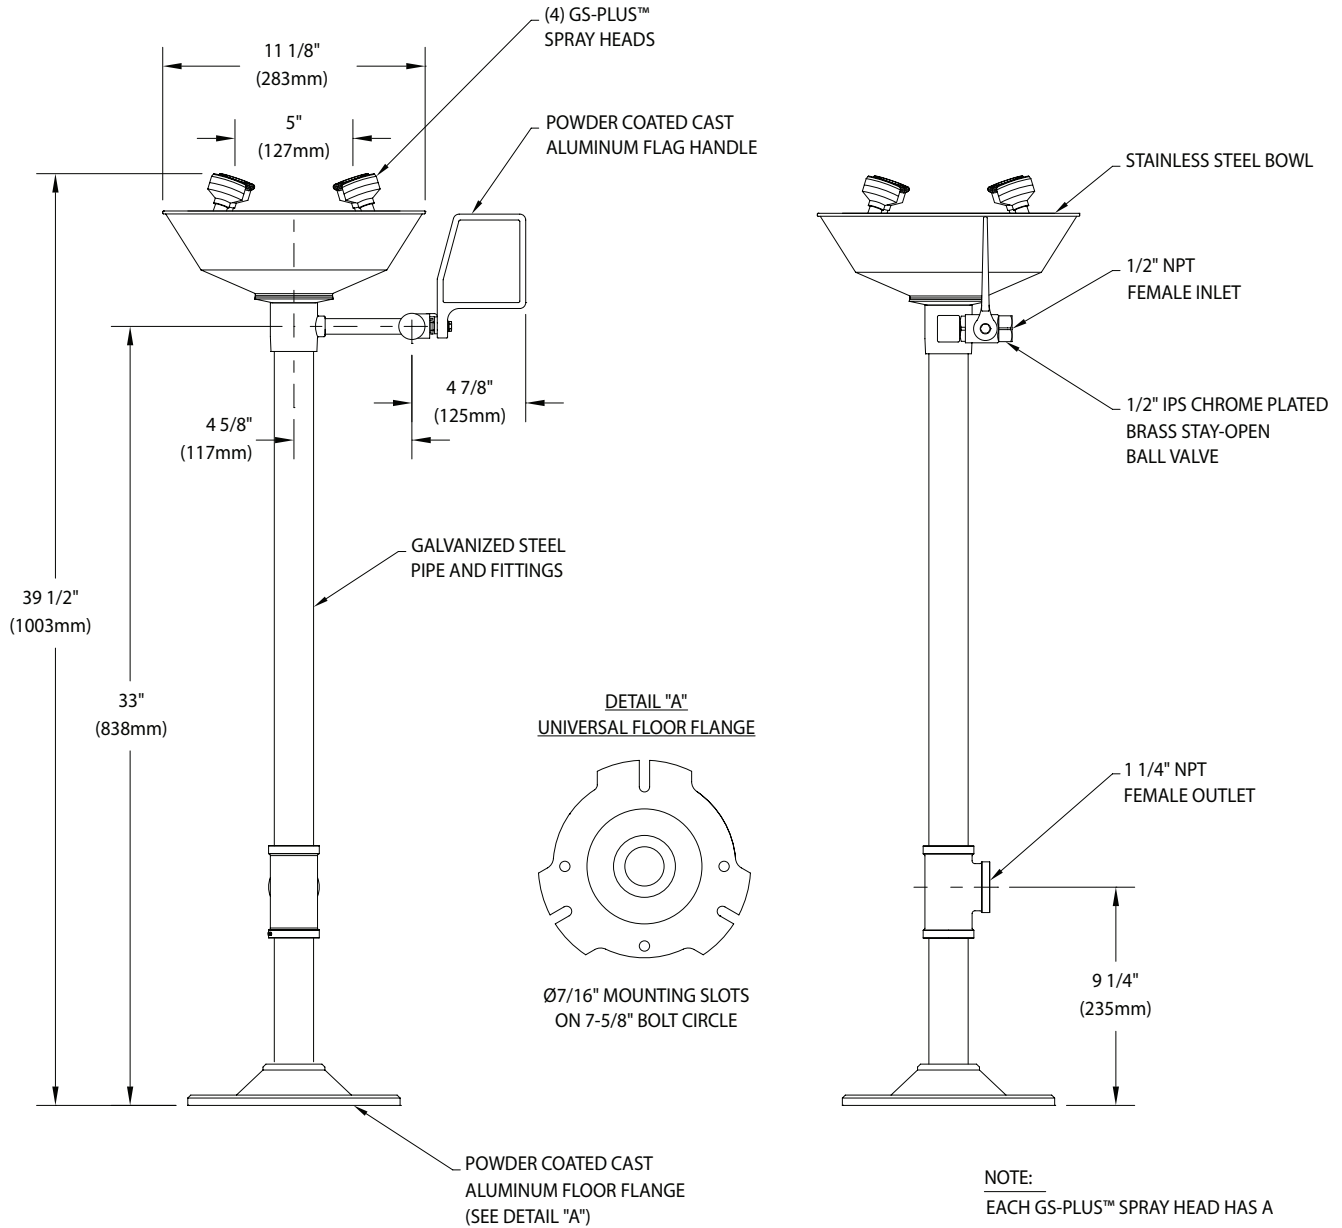

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 1/4" (6mm). rev. 0422

Sign Included

