


- EW806** Eyewash, Deck Mounted, 90° Swivel, Right Hand Mounting
- EW806LH** Eyewash, Deck Mounted, 90° Swivel, Left Hand Mounting

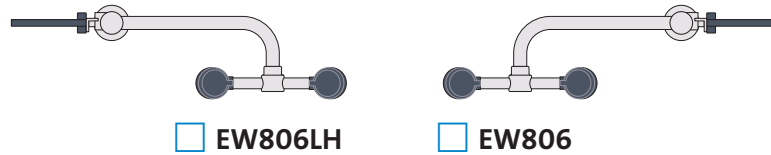

Application: Eyewash for mounting on counter next to sink. Spray heads swivel 90 degrees from storage to operational position. Water flow is activated by flag handle.

Spray Head Assembly: Two GS-Plus™ spray heads. Each head has a “flip top” dust cover, internal flow control and filter to remove impurities from the water flow.

Valve: 1/2" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals.

Mounting: Unit may be mounted on right side (EW806) or left side (EW806LH) of sink. Furnished with locknut and washer for securing unit to countertop.

Construction: Polished chrome plated brass.

Supply: 1/2" NPT male inlet.


Sign: ANSI-compliant identification sign.

Quality Assurance: Unit is completely assembled and water tested prior to shipment.

Available Options

- TM6020** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to “Thermostatic Mixing Valves” section for complete technical and product selection information.

- **EW806** Eyewash, Deck Mounted, 90° Swivel, Right Hand Mounting
- **EW806LH** Eyewash, Deck Mounted, 90° Swivel, Left Hand Mounting

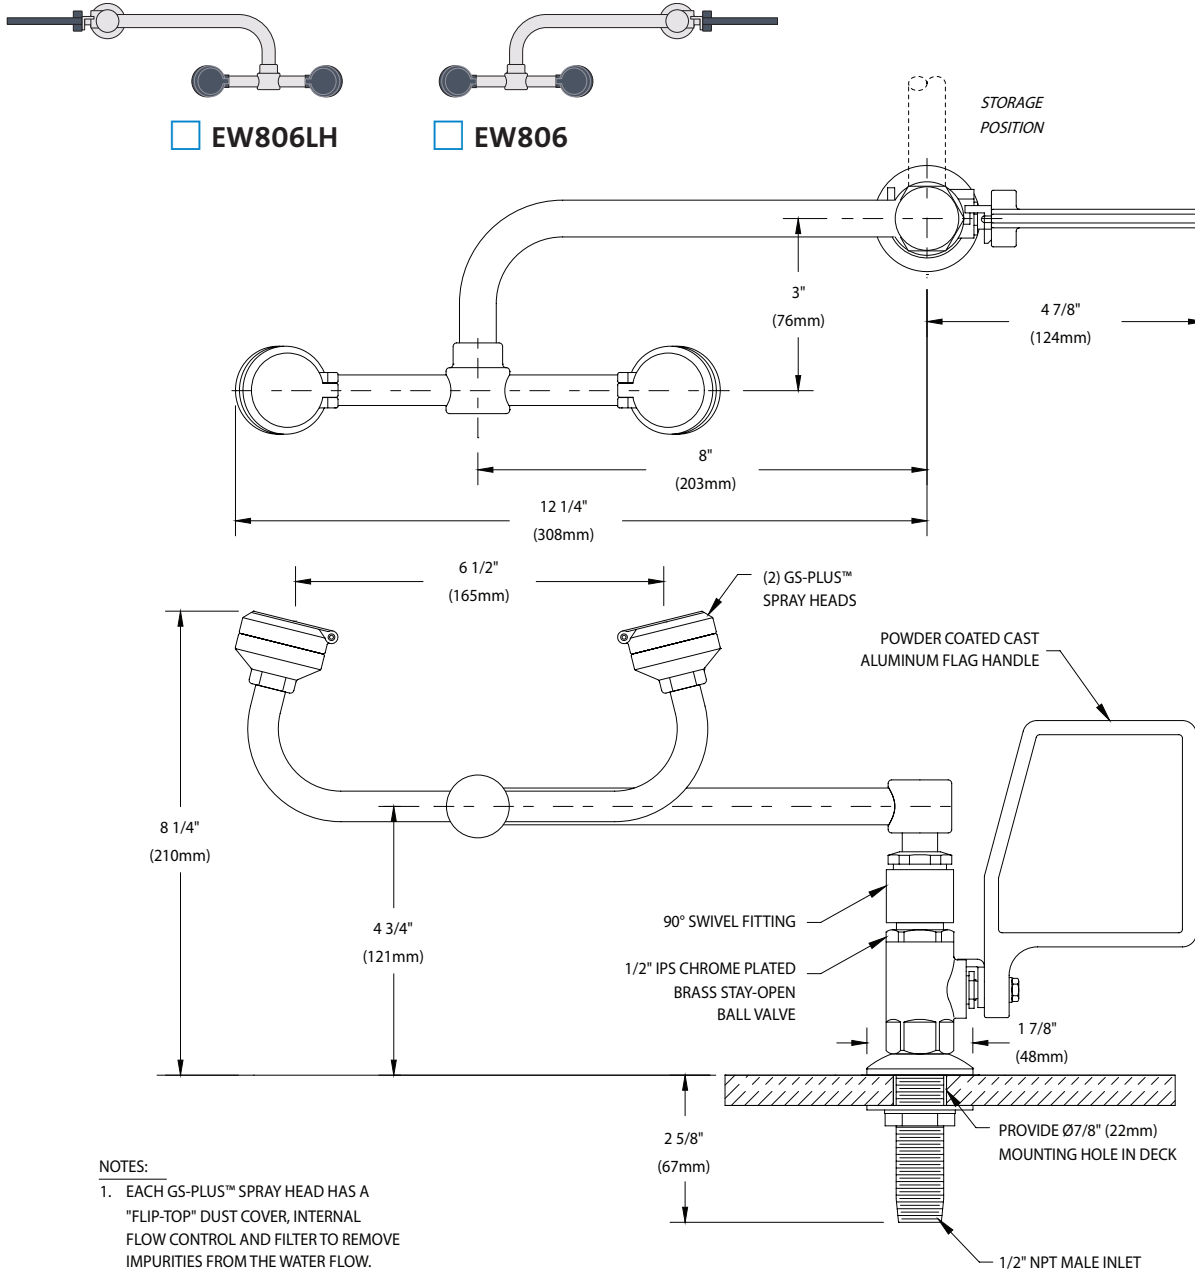

- NOTES:
1. EACH GS-PLUS™ SPRAY HEAD HAS A "FLIP-TOP" DUST COVER, INTERNAL FLOW CONTROL AND FILTER TO REMOVE IMPURITIES FROM THE WATER FLOW.
 2. SECURE UNIT TO COUNTER USING MOUNTING SHANK AND LOCKNUT.

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 1/4" (6mm). rev. 0422

Sign Included

