

- SS902HS** Safety Station with Eyewash, Auxiliary Drench Hose, Stainless Steel Bowl
- SS902P-HS** Safety Station with Eyewash, Auxiliary Drench Hose, Plastic Bowl

Application: Combination eyewash and shower safety station. Furnished with auxiliary drench hose for rinsing user's eyes, face or body. Eyewash features two GS-Plus™ spray-type outlet heads that deliver a flood of water for rinsing eyes.

Shower Head: 10" diameter orange ABS plastic with 20 GPM flow control.

Shower Valve: 1" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals. Furnished with stainless steel actuating arm and 29" stainless steel pull rod.

Spray Head Assembly: Two GS-Plus™ spray heads. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from water flow.

Eyewash Bowl: 11-1/8" diameter stainless steel (SS902HS) or 11-3/4" diameter orange ABS plastic (SS902P-HS).

Eyewash Valve: 1/2" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals.

Drench Hose Unit: Auxiliary hand-held drench hose for rinsing eyes, face or body. Unit has single FS-Plus™ spray-type outlet head, self-closing valve with squeeze handle, 8 ft. reinforced PVC hose and wall hook.

Pipe and Fittings: Schedule 40 galvanized steel. Furnished with orange polyethylene pipe covers for high visibility and corrosion resistance.

Supply: 1-1/4" NPT female top or side inlet.

Waste: 1-1/4" NPT female outlet. Outlet can be positioned at either 9-1/4" or 19-5/8" above finished floor by reversing lower pipe nipples.

Sign: ANSI-compliant identification sign.

Quality Assurance: Valve and spray head assemblies are factory assembled and water tested prior to shipment.


Available Options

- TM6040** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product information.
- GC** Powder coated finish on galvanized pipe and fittings. Available colors include orange, yellow, red and green.
- GRN** Green ABS plastic shower head.
- YEL** Yellow ABS plastic shower head.
- SSH** Stainless steel shower head.
- AP275-200** Electric flashing light and alarm horn unit for mounting on wall or vertical pipe. Light illuminates and horn sounds when eyewash or shower is activated. Furnished complete with flow switch and mounting hardware.
- AP250-015** Modesty curtain for mounting on safety station.



SS902HS Safety Station with Eyewash, Auxiliary Drench Hose, Stainless Steel Bowl

SS902P-HS Safety Station with Eyewash, Auxiliary Drench Hose, Plastic Bowl

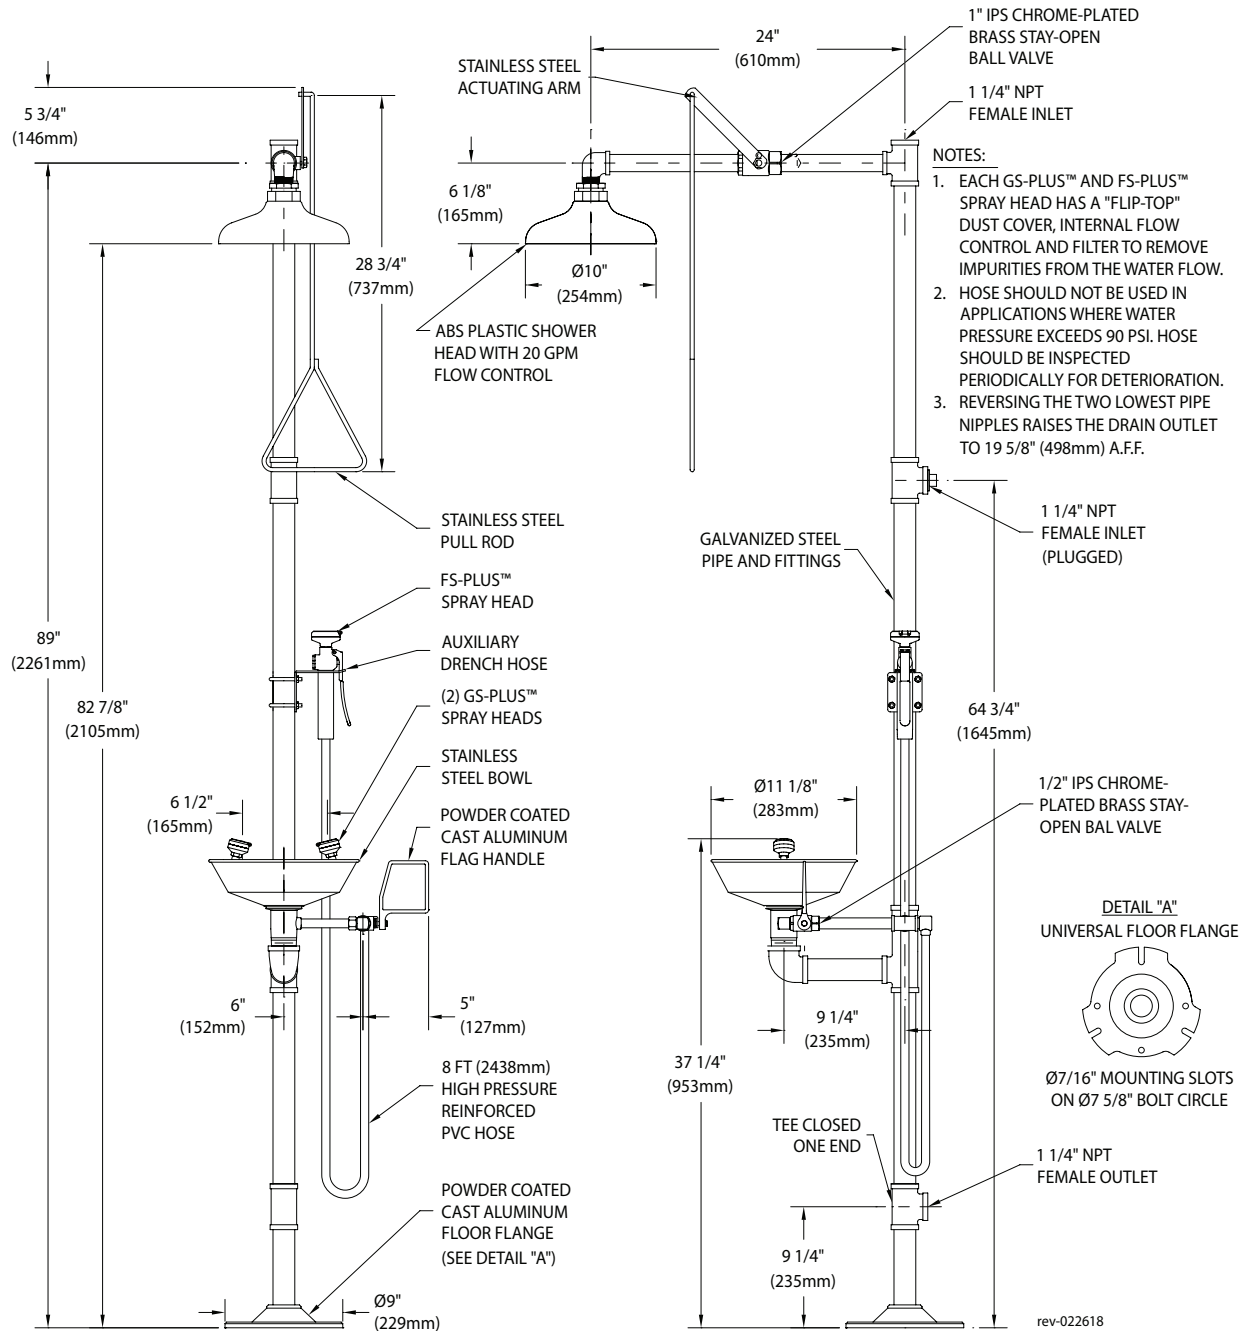

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are $\pm 1/4"$ (6mm). rev. 0622

Sign Included



WaterSaver Faucet Co. 312 666 5500 TELEPHONE
701 W Erie St 312 666 5501 FACSIMILE
Chicago, IL 60654 wsflab.com

Listed 8116. Units have been tested to and comply with ANSI Z358.1-2014 and the Uniform Plumbing Code.

