

- SS902PCC** Safety Station with Eyewash, Polished Chrome Construction
- SS902PCC-HFC** Safety Station with Eyewash, Polished Chrome Construction, Hand/Foot Control

**Application:** Combination eyewash and shower safety station. Unit is constructed of polished chrome plated brass pipe, fittings and components for attractive appearance and superior durability. Eyewash features two GS-Plus™ spray-type outlet heads that deliver a flood of water for rinsing eyes.

**Shower Head:** 10" diameter stainless steel with 20 GPM flow control.

**Shower Valve:** 1" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals. Furnished with stainless steel actuating arm and 29" stainless steel pull rod.

**Spray Head Assembly:** Two GS-Plus™ spray heads. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from water flow.

**Eyewash Bowl:** 11-1/8" diameter stainless steel.

**Eyewash Valve:** 1/2" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals.

**Pipe and Fittings:** Polished chrome plated brass.

**Supply:** 1-1/4" NPT female top inlet.

**Waste:** 1-1/4" NPT female outlet. Outlet can be positioned at either 8-1/4" or 20-1/4" above finished floor by reversing lower pipe nipples.

**Sign:** ANSI-compliant identification sign.


**Quality Assurance:** Valve and spray head assemblies are factory assembled and water tested prior to shipment.

### Available Options

- TM6040** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product information.
- BC** Stainless steel cover for eyewash bowl.
- AP275-200** Electric flashing light and alarm horn unit for mounting on wall or vertical pipe. Light illuminates and horn sounds when eyewash or shower is activated. Furnished complete with flow switch and mounting hardware.
- AP250-015** Modesty curtain for mounting on safety station.



- SS902PCC** Safety Station with Eyewash, Polished Chrome Construction
- SS902PCC-HFC** Safety Station with Eyewash, Polished Chrome Construction, Hand/Foot Control

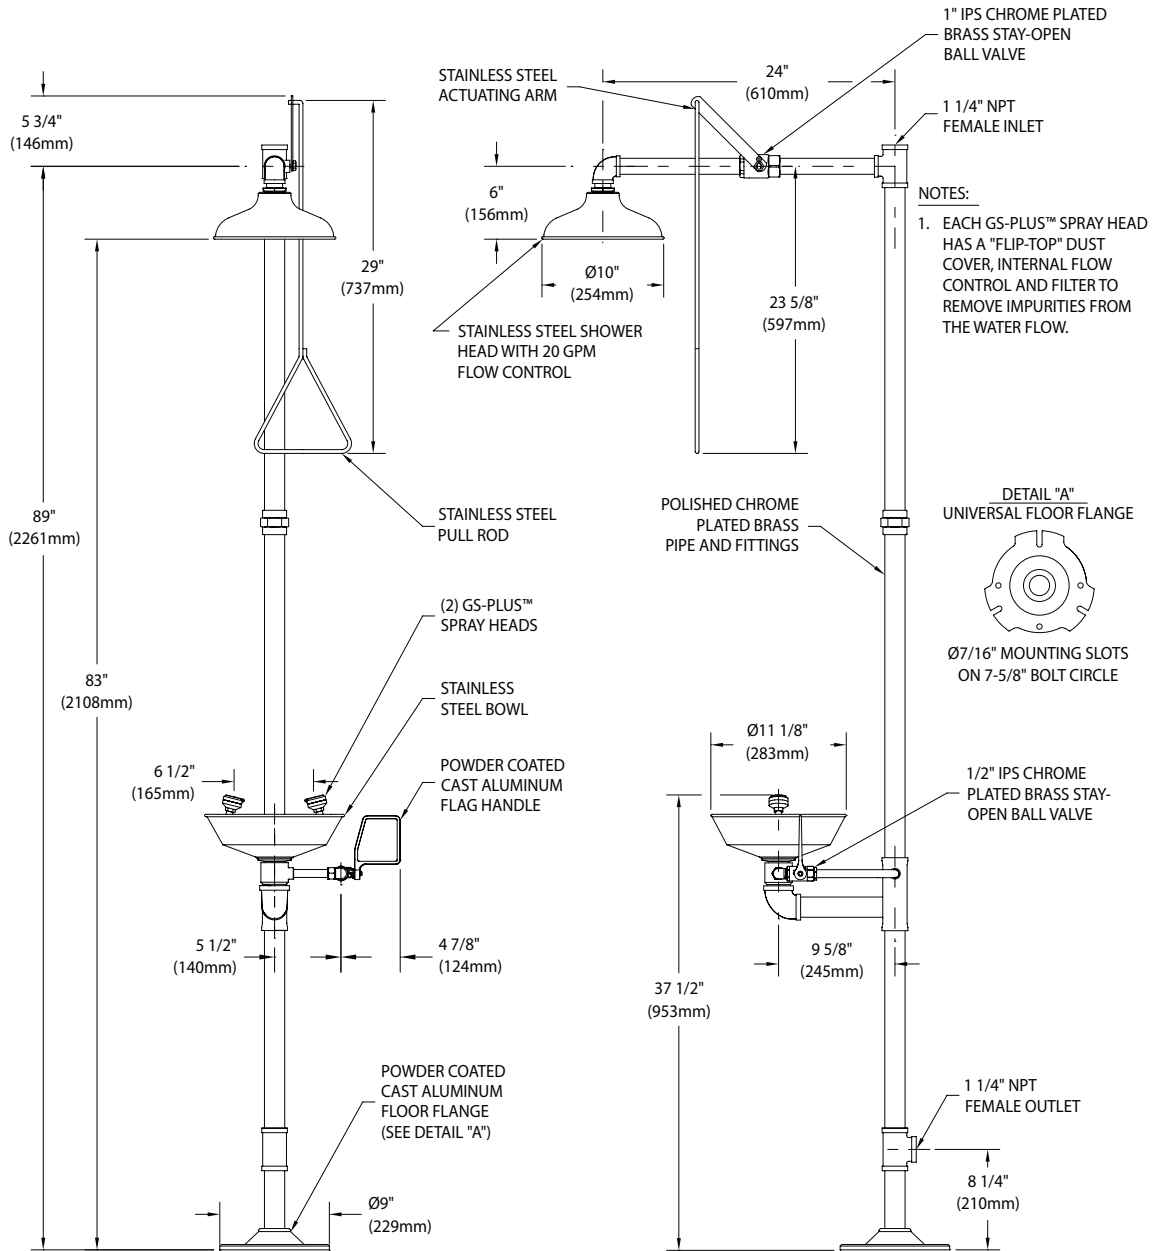

Rev. 112618

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 1/4" (6mm). rev. 0622

Sign Included

