

- SS950HS** Safety Station with Eye/Face Wash, Auxiliary Drench Hose, Stainless Steel Bowl
- SS950P-HS** Safety Station with Eye/Face Wash, Auxiliary Drench Hose, Plastic Bowl

Application: Combination eye/face wash and shower safety station. Furnished with auxiliary drench hose for rinsing user's eyes, face or body. Eye/face wash features two large FS-Plus™ spray-type outlet heads that deliver a flood of water for rinsing eyes and face.

Shower Head: 10" diameter orange ABS plastic with 20 GPM flow control.

Shower Valve: 1" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals. Furnished with stainless steel actuating arm and 29" stainless steel pull rod.

Spray Head Assembly: Two FS-Plus™ spray heads. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from water flow.

Eye/Face Wash Bowl: 11-1/8" diameter stainless steel (SS950HS) or 11-3/4" diameter orange ABS plastic (SS950P-HS).

Eye/Face Wash Valve: 1/2" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals.

Drench Hose Unit: Auxiliary hand-held drench hose for rinsing eyes, face or body. Unit has single FS-Plus™ spray-type outlet head, self-closing valve with squeeze handle, 8 ft. reinforced PVC hose and wall hook.

Pipe and Fittings: Schedule 40 galvanized steel. Furnished with orange polyethylene pipe covers for high visibility and corrosion resistance.

Supply: 1-1/4" NPT female top or side inlet.

Waste: 1-1/4" NPT female outlet. Outlet can be positioned at either 9-1/4" or 19-5/8" above finished floor by reversing lower pipe nipples.

Sign: ANSI-compliant identification sign.

Quality Assurance: Valve and spray head assemblies are factory assembled and water tested prior to shipment.


Available Options

- TM6040** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product selection information.
- GC** Powder coated finish on galvanized pipe and fittings. Available colors include orange, yellow, red and green.
- GRN** Green ABS plastic shower head.
- YEL** Yellow ABS plastic shower head.
- SSH** Stainless steel shower head.
- AP275-200** Electric flashing light and alarm horn unit for mounting on wall or vertical pipe. Light illuminates and horn sounds when eye/face wash or shower is activated. Furnished complete with flow switch and mounting hardware.
- AP250-015** Modesty curtain for mounting on safety station.



SS950HS Safety Station with Eye/Face Wash, Auxiliary Drench Hose, Stainless Steel Bowl

SS950P-HS Safety Station with Eye/Face Wash, Auxiliary Drench Hose, Plastic Bowl

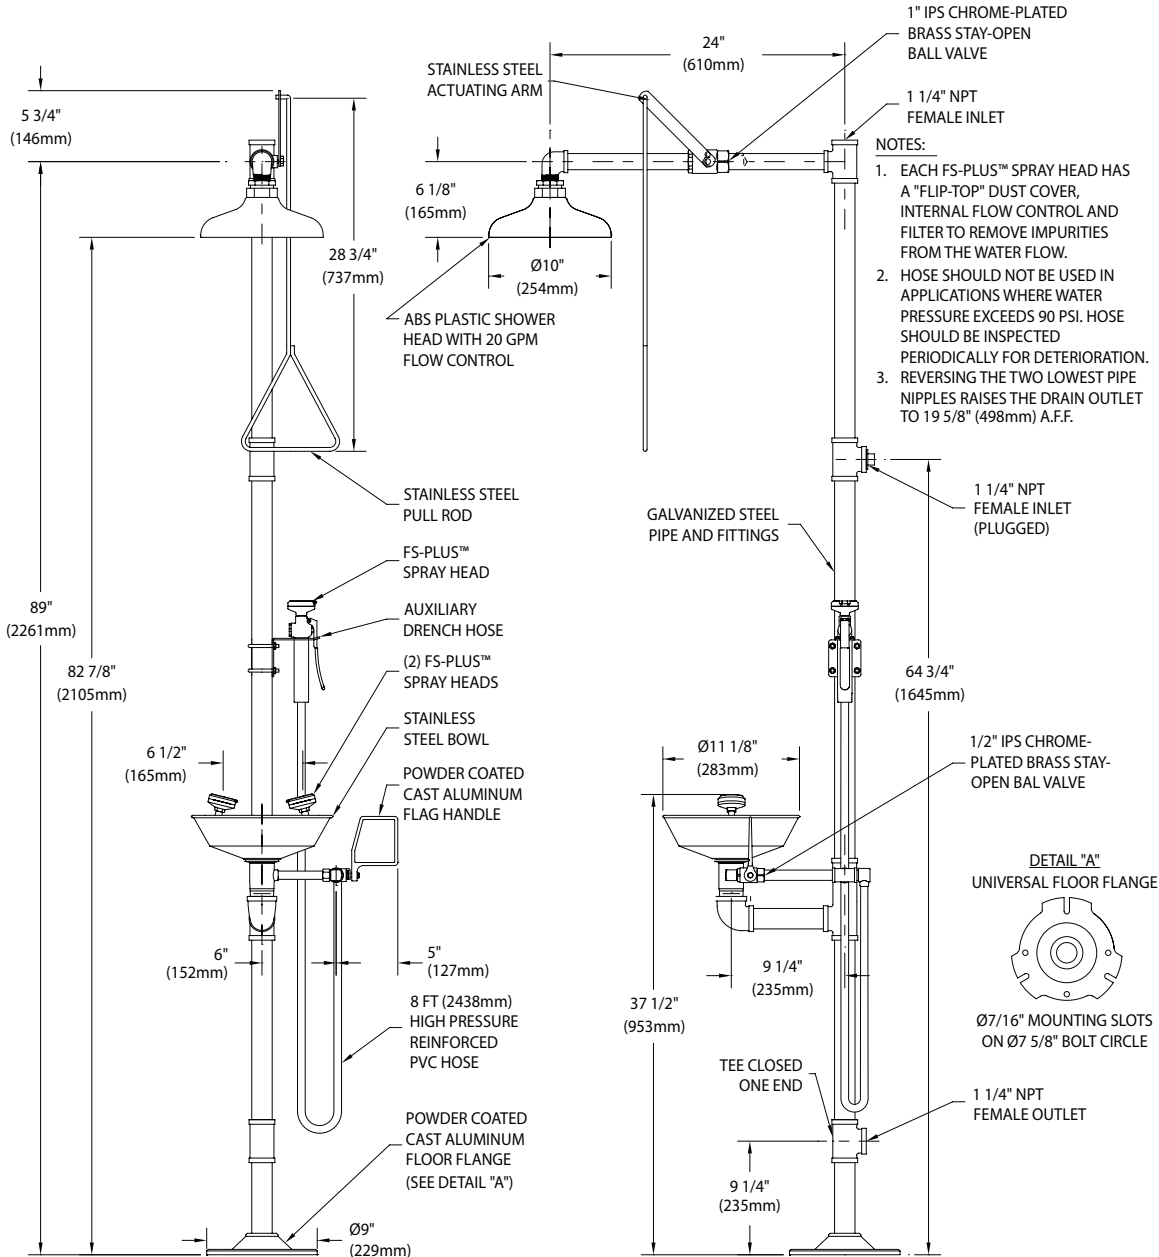

Rev. 022618

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are $\pm 1/4"$ (6mm). rev. 0522

Sign Included



WaterSaver Faucet Co. 312 666 5500 TELEPHONE
701 W Erie St 312 666 5501 FACSIMILE
Chicago, IL 60654 wsflab.com

Listed 8116. Units have been tested to and comply with ANSI Z358.1-2014 and the Uniform Plumbing Code.

