

### **SS996** Safety Station with Eye/Face Wash, All-Stainless Steel Construction

**Application:** All-stainless steel combination eye/face wash and shower safety station. Stainless steel construction is ideal for highly corrosive environments and cleanroom applications. Eye/face wash features two large FS-Plus™ spray-type outlet heads that deliver a flood of water for rinsing eyes and face.

**Shower Head:** 10" diameter stainless steel with 20 GPM flow control.

**Shower Valve:** 1" IPS Type 316 stainless steel stay-open ball valve. Valve has stainless steel ball and PTFE seals. Furnished with stainless steel actuating arm and 29" stainless steel pull rod.

**Spray Head Assembly:** Two FS-Plus™ spray heads. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from water flow.

**Eye/Face Wash Bowl:** 11-1/8" diameter stainless steel.

**Eye/Face Wash Valve:** 1/2" IPS Type 316 stainless steel stay-open ball valve. Valve has stainless steel ball and PTFE seals.

**Pipe and Fittings:** Schedule 40 Type 304 brushed stainless steel. Furnished with orange polyethylene pipe covers for high visibility and corrosion resistance.

**Supply:** 1-1/4" NPT female top or side inlet.

**Waste:** 1-1/4" NPT female outlet. Outlet can be positioned at either 8-1/4" or 19-3/8" above finished floor by reversing lower pipe nipples.

**Sign:** ANSI-compliant identification sign.


**Quality Assurance:** Valve and spray head assemblies are factory assembled and water tested prior to shipment.

### Available Options

- TM6040** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product selection information.
- BC** Stainless steel cover for eye/face wash bowl.
- AP275-200** Electric flashing light and alarm horn unit for mounting on wall or vertical pipe. Light illuminates and horn sounds when eye/face wash or shower is activated. Furnished complete with flow switch and mounting hardware.
- AP250-015** Modesty curtain for mounting on safety station.



**SS996** Safety Station with Eye/Face Wash, All-Stainless Steel Construction

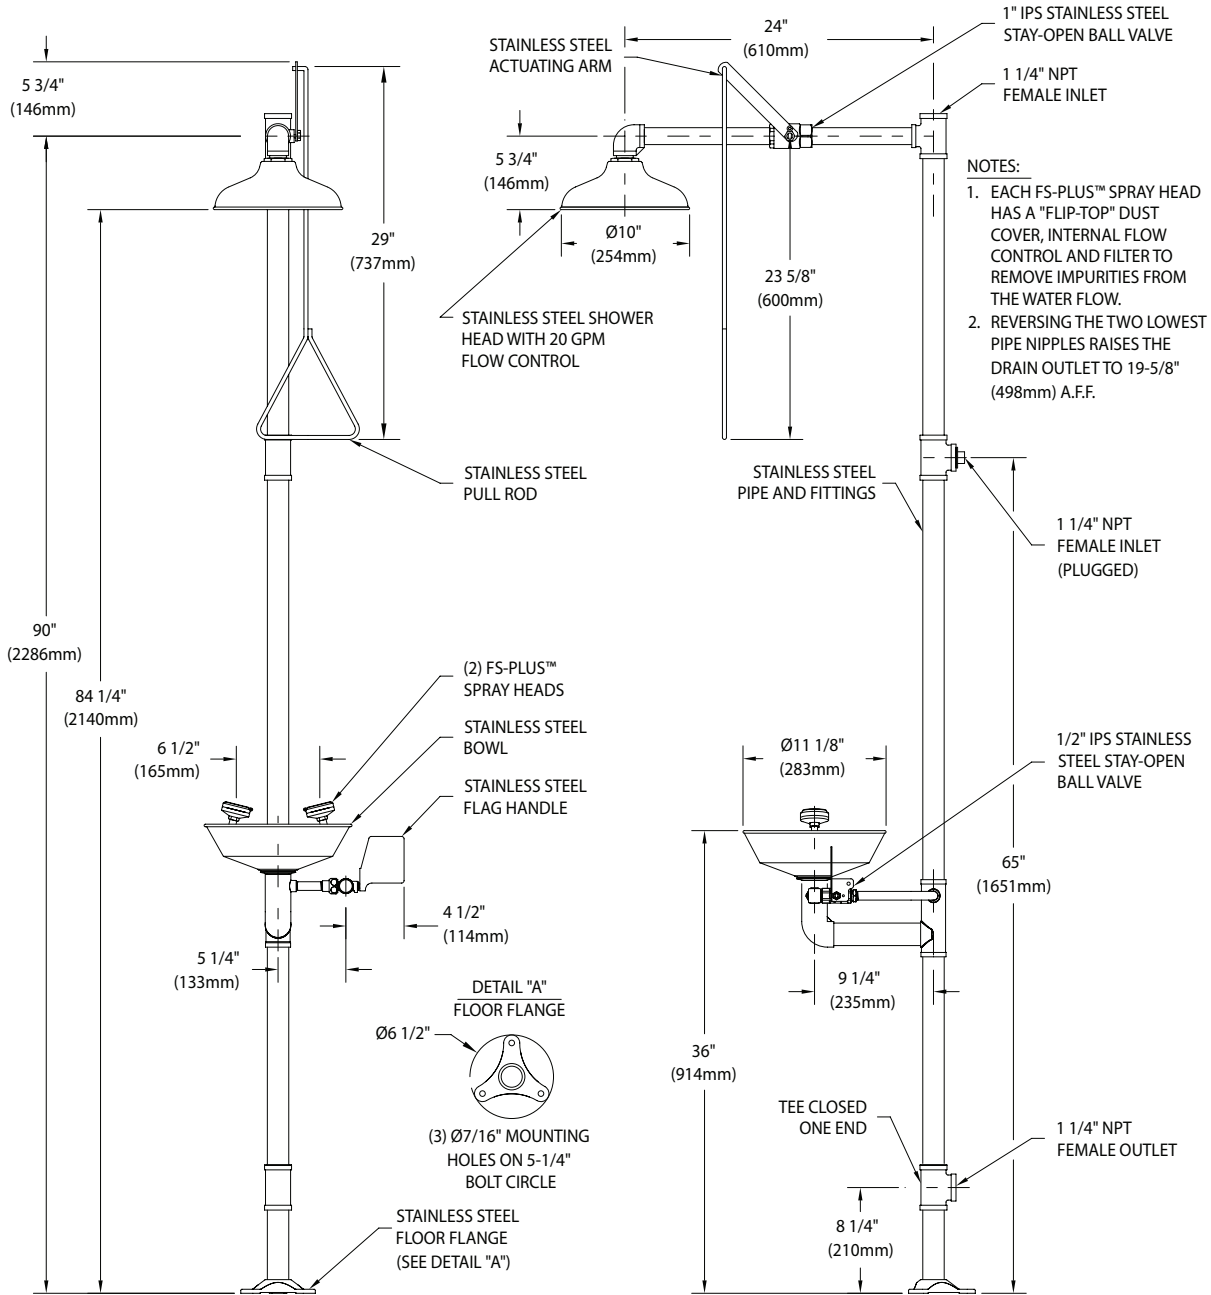

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 1/4" (6mm). rev. 0622