

- VREW1022** Vandal-Resistant Eyewash/Drench Hose Unit, Deck Mounted, PVC Hose
- VREW1022FSH** Vandal-Resistant Eyewash/Drench Hose Unit, Deck Mounted, Stainless Steel Hose

**Application:** Vandal-resistant dual purpose eyewash/drench hose unit for deck mounting. *Note: Unit meets the provisions of ANSI Z358.1-2014 as both an eyewash and a drench hose. Unit may be left in the deck flange for use as a fixed eyewash, leaving user's hands free. Alternatively, unit may be removed for use as a drench hose to rinse any part of user's eyes, face or body. Vandal-resistant construction makes unit ideal for use in schools and other areas where equipment might be subject to abuse.*

**Spray Head Assembly:** Two vandal-resistant GS-Plus™ spray heads. Each head has brass body, stainless steel “flip top” dust cover, internal flow control and filter to remove impurities from the water flow. Spray heads have retaining ring with set screw to protect internal components.

**Valve:** Forged brass squeeze valve activated by stainless steel lever handle. Valve has replaceable stainless steel seat for exceptional durability. Valve closes when lever handle is released.

**Hose:** 8' reinforced PVC hose (VREW1022) or flexible stainless steel hose (VREW1022FSH). 300 PSI maximum working pressure.

**Mounting** Deck flange for countertop mounting. Flange has handle locator guide to position handle to face forward at all times.

**Supply:** 3/8" NPT male swivel-type inlet.

**Sign:** ANSI-compliant identification sign.


**Quality Assurance:** Unit is completely assembled and water tested prior to shipment.

### Available Options

- BP** In-line dual check backflow preventer installed on inlet of hose. *Note: Check with local code authority for compliance with local plumbing code.*
- HG** Undercounter hose guide bracket to prevent hose from tangling or binding.
- VB** In-line vacuum breaker for installation between valve and spray head.
- TMV** AP3600 thermostatic mixing valve precisely blends hot and cold water to deliver warm (tepid) water as required by ANSI Z358.1-2014. Refer to “Tempering Units” section for complete technical and product selection information.



- **VREW1022** Vandal-Resistant Eyewash/Drench Hose Unit, Deck Mounted, PVC Hose
- **VREW1022FSH** Vandal-Resistant Eyewash/Drench Hose Unit, Deck Mounted, Stainless Steel Hose

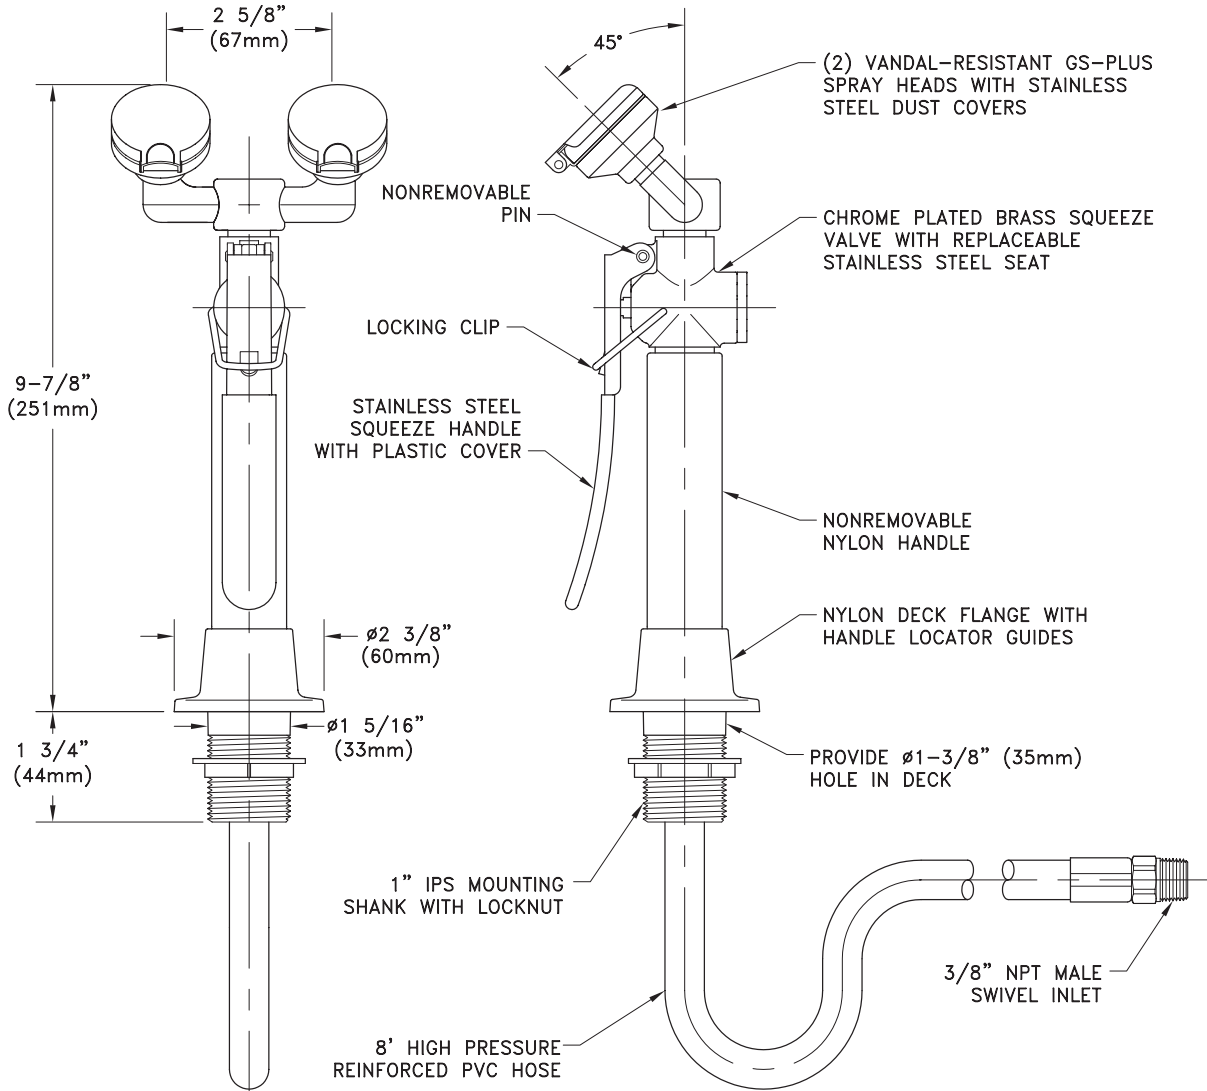

**NOTES:**

1. UNIT HAS VANDAL-RESISTANT CONSTRUCTION. ALL CONNECTIONS ARE SECURED WITH SET SCREWS OR CEMENT TO PREVENT DISASSEMBLY.
2. EACH VANDAL-RESISTANT SPRAY HEAD HAS REMOVABLE BRASS COVER SECURED WITH SET SCREW, "FLIP-TOP" DUST COVER, INTERNAL FLOW CONTROL AND FILTER TO REMOVE IMPURITIES FROM THE WATER FLOW.
3. HOSE SHOULD NOT BE USED IN APPLICATIONS WHERE WATER PRESSURE EXCEEDS 90 PSI. HOSE SHOULD BE INSPECTED PERIODICALLY FOR DETERIORATION.

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are  $\pm 1/4"$  (6mm). rev. 0315

Sign Included

