

### **SSBF994** Barrier-Free Safety Station with WideArea™ Eye/Face Wash, All-Stainless Steel Construction

**Application:** All-stainless steel barrier-free combination WideArea™ eye/face wash and shower safety station. Shower head and pull rod are extended for improved access. Bowl is lowered and extended to permit access by wheelchair user. Profile of unit is “flattened” to comply with maximum height and reach, minimum knee clearance and distance from obstructions. Stainless steel construction is ideal for highly corrosive environments and cleanroom applications.

**ADA Compliance:** Unit complies with ADA requirements for accessibility by handicapped persons (maximum height and reach, minimum knee clearance and distance from obstructions).

**Shower Head:** 10" diameter stainless steel with 20 GPM flow control.

**Shower Valve:** 1" IPS Type 316 stainless steel stay-open ball valve. Valve has stainless steel ball and PTFE seals. Furnished with stainless steel actuating arm and 47-1/2" stainless steel pull rod.

**Spray Head Assembly:** Four GS-Plus™ spray heads. Each head has a “flip top” dust cover, internal flow control and filter to remove impurities from water flow.

**Eye/Face Wash Bowl:** 11-1/8" diameter stainless steel.

**Eye/Face Wash Valve:** 1/2" IPS Type 316 stainless steel stay-open ball valve. Valve has stainless steel ball and PTFE seals.

**Pipe and Fittings:** Schedule 40 brushed stainless steel.

**Supply:** 1-1/4" NPT female top or side inlet.


**Waste:** 1-1/4" NPT female outlet. Outlet can be positioned at either 8-1/4" or 19-3/8" above finished floor by reversing lower pipe nipples.

**Sign:** ANSI-compliant identification sign.


**Quality Assurance:** Valve and spray head assemblies are factory assembled and water tested prior to shipment.

#### Available Options

- TM6040** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to “Thermostatic Mixing Valves” section for complete technical and product selection information.
- BC** Stainless steel cover for eye/face wash bowl.
- HS** Auxiliary drench hose unit for rinsing eyes, face or body.
- APBF250-015** Modesty curtain for mounting on Barrier-Free safety station.
- AP275-200** Electric flashing light and alarm horn unit for mounting on wall or vertical pipe. Light illuminates and horn sounds when eye/face wash or shower is activated. Furnished complete with flow switch and mounting hardware.

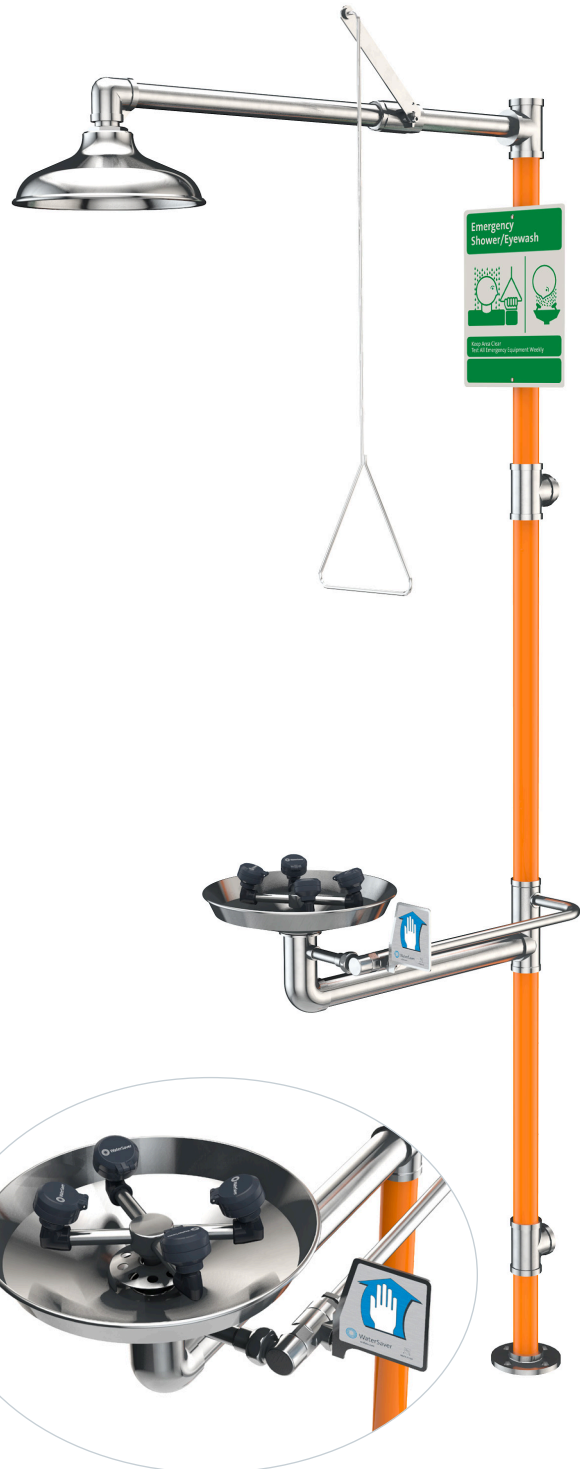

**SSBF994** Barrier-Free Safety Station with WideArea™ Eye/Face Wash, All-Stainless Steel Construction

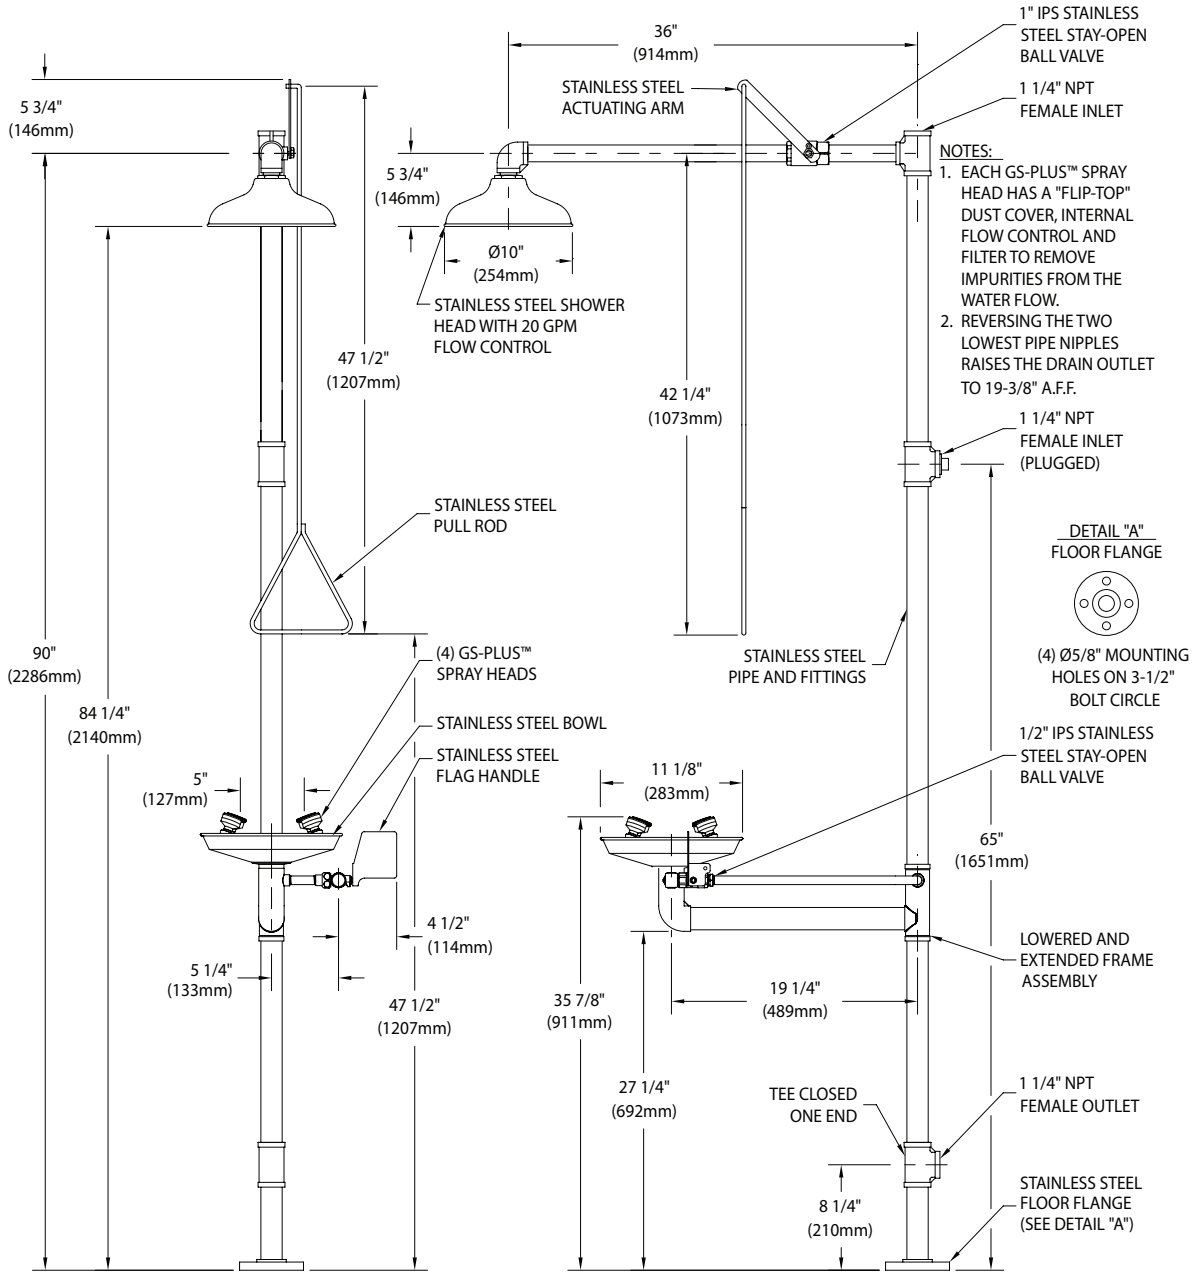

Rev. 061818

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are  $\pm 1/4"$  (6mm). rev. 0622

WaterSaver Faucet Co. 312 666 5500 TELEPHONE  
701 W Erie St 312 666 5501 FACSIMILE  
Chicago, IL 60654 wsflab.com



Listed 8116. Units have been tested to and comply with ANSI Z358.1-2014 and the Uniform Plumbing Code.

