

- EW562** 15 Gallon Portable Eyewash/Drench Hose Unit
- EW561** 15 Gallon Portable Eyewash

**Application:** Self-contained eyewash and/or drench hose units are ideal where a continuous supply of potable water is not available. These units may be used in low traffic areas, low hazard areas or where installation of plumbed equipment is not cost effective. Fifteen gallon units provide approximately 10 usable gallons (37.9 liters) of water for effective rinsing of the eyes, face or body. *Note that, under ANSI Z358.1-2014, drench hose units supplement but do not replace other types of emergency equipment.*

**Tank:** 15 gallon stainless steel pressurized tank. Tank has built-in carrying handles, Schrader air intake valve, pressure gauge and pressure relief valve. Tank has approximately 10 gallons (37.9 liters) usable capacity.

**Eyewash Unit:** Two GS-Plus spray heads, each with a “flip top” dust cover, internal flow control and filter. 1/2” IPS chrome plated brass stay-open ball valve with flag handle. Pressure regulator controls eyewash flow to 0.65 GPM for 15 minutes.

**Drench Hose:** Single GS-Plus spray head with “flip top” dust cover, internal flow control and filter. Chrome plated brass squeeze valve with stainless steel lever handle and 6 ft. reinforced PVC hose.

**Operation:** To operate unit, fill with clean potable water and add bacteriostatic additive (supplied with unit). Additive protects against growth of bacteria, fungus, algae and acanthamoeba inside unit. After filling with water, pressurize unit to 80 PSI air pressure. If necessary, adjust pressure regulator to achieve maximum flow for fifteen minutes. Unit should be inspected regularly and water in unit should be changed at least once every six months. Filling instructions included.

**Weight:** 35.6 lbs. empty, 118.9 lbs. filled.

**Quality Assurance:** Unit is fully assembled, pressurized and water tested at the factory. Unit is depressurized and emptied prior to shipping. Some assembly required in field.

**Sign:** ANSI compliant identification sign permanently affixed to tank.

### Available Options

- EW540BA** 8 oz. bottle of bacteriostatic additive to protect against growth of bacteria and other impurities in portable unit. (One bottle supplied with unit).
- 200-013R** Two wheel hand cart for transporting and storing unit.






# WaterSaver

Portable Units

- EW562** 15 Gallon Portable Eyewash/Drench Hose Unit
- EW561** 15 Gallon Portable Eyewash

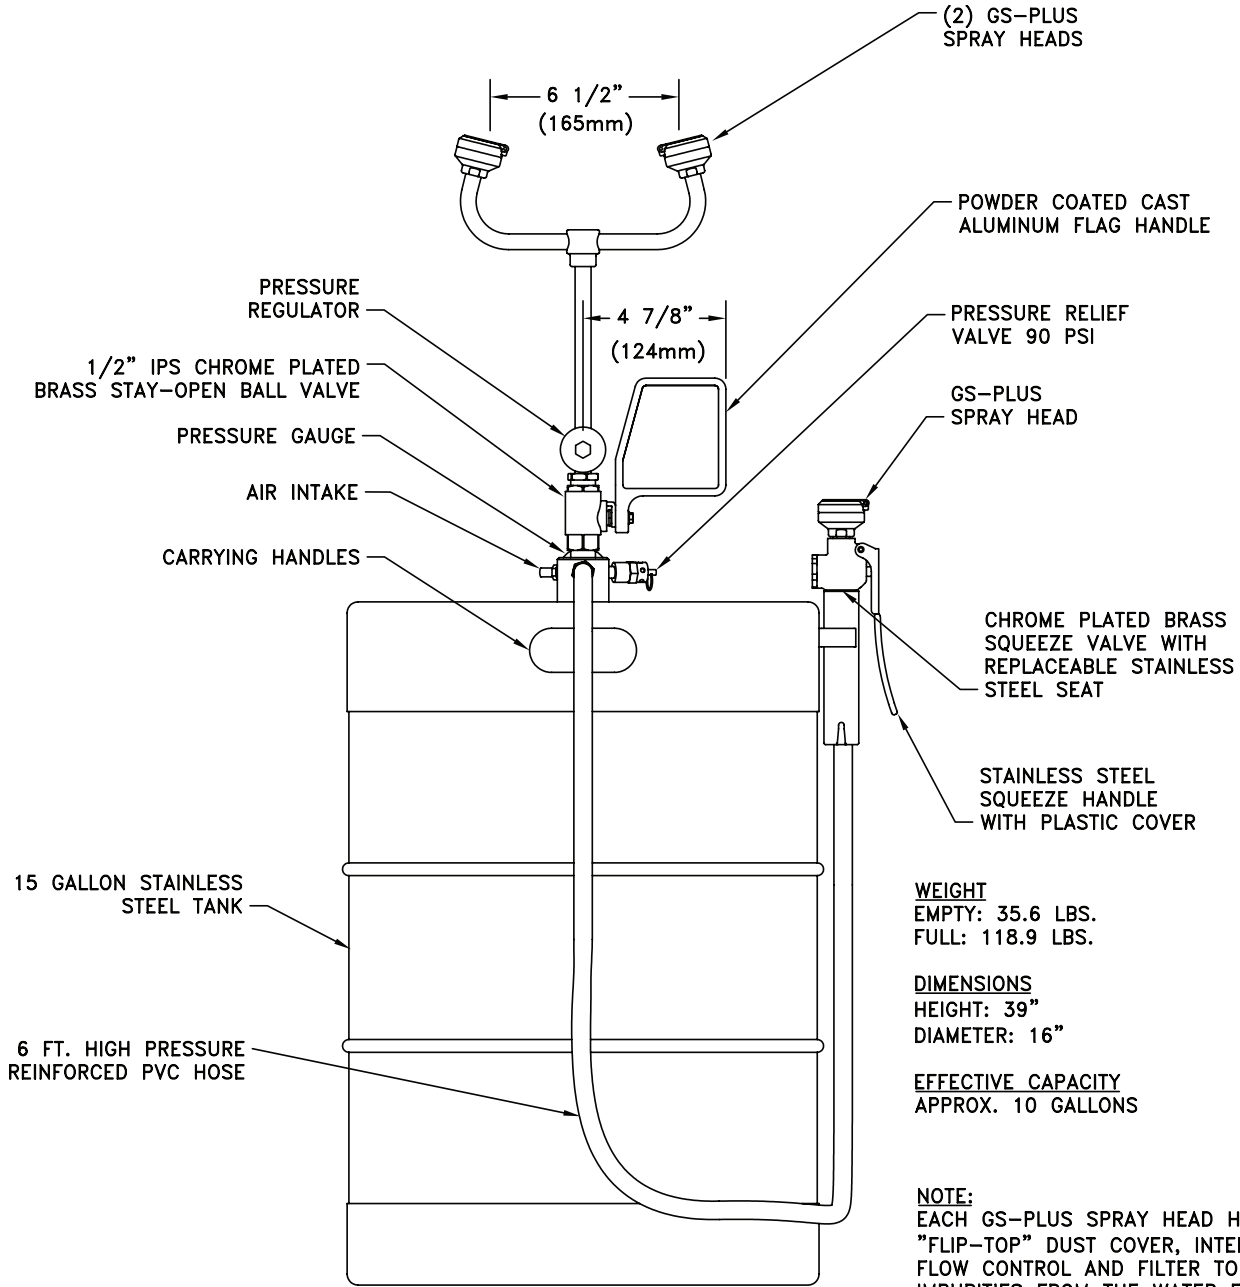

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 1/4" (6mm). rev. 0215

WaterSaver 312 666 5500 TELEPHONE  
 701 W Erie St 312 666 5501 FACSIMILE  
 Chicago, IL 60654 wsflab.com

Listed 8116. Units have been tested to and comply with ANSI Z358.1-2014 and the Uniform Plumbing Code.



ETL Listed 101496. Units have been tested to and comply with ANSI Z358.1-2014.

