

- SS950HFC** Safety Station with Eye/Face Wash, Hand and Foot Control, Stainless Steel Bowl
- SS950P-HFC** Safety Station with Eye/Face Wash, Hand and Foot Control, Plastic Bowl

**Application:** Combination eye/face wash and shower safety station. Eye/face wash is activated by flag handle or foot treadle and features two large FS-Plus™ spray-type outlet heads that deliver a flood of water for rinsing eyes and face.

**Shower Head:** 10" diameter orange ABS plastic with 20 GPM flow control.

**Shower Valve:** 1" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals. Furnished with stainless steel actuating arm and 29" stainless steel pull rod.

**Spray Head Assembly:** Two FS-Plus™ spray heads. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from water flow.

**Eye/Face Wash Bowl:** 11-1/8" diameter stainless steel (SS950HFC) or 11-3/4" diameter orange ABS plastic (SS950P-HFC).

**Eye/Face Wash Valve:** 1/2" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals. Valve is activated by flag handle or foot treadle. Unit remains in operation until handle is returned to closed position.

**Pipe and Fittings:** Schedule 40 galvanized steel. Furnished with orange polyethylene pipe covers for high visibility and corrosion resistance.

**Supply:** 1-1/4" NPT female top or side inlet.


**Waste:** 1-1/4" NPT female outlet.

**Sign:** ANSI-compliant identification sign.

**Quality Assurance:** Valve and spray head assemblies are factory assembled and water tested prior to shipment.


### Available Options

- TM6040** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product selection information.
- GC** Powder coated finish on galvanized pipe and fittings. Available colors include orange, yellow, red and green.
- GRN** Green ABS plastic shower head.
- YEL** Yellow ABS plastic shower head.
- SSH** Stainless steel shower head.
- AP275-200** Electric flashing light and alarm horn unit for mounting on wall or vertical pipe. Light illuminates and horn sounds when eye/face wash or shower is activated. Furnished complete with flow switch and mounting hardware.
- AP250-015** Modesty curtain for mounting on safety station.

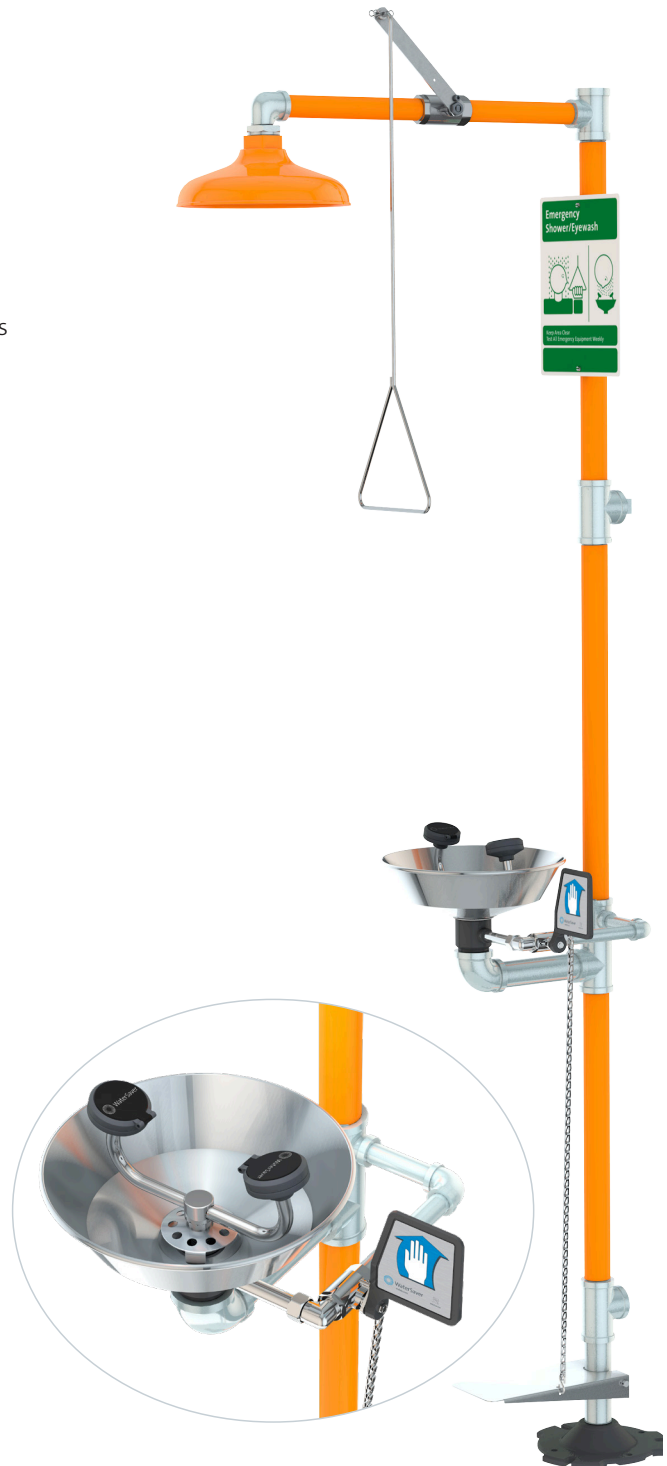

**SS950HFC** Safety Station with Eye/Face Wash, Hand and Foot Control, Stainless Steel Bowl

**SS950P-HFC** Safety Station with Eye/Face Wash, Hand and Foot Control, Plastic Bowl

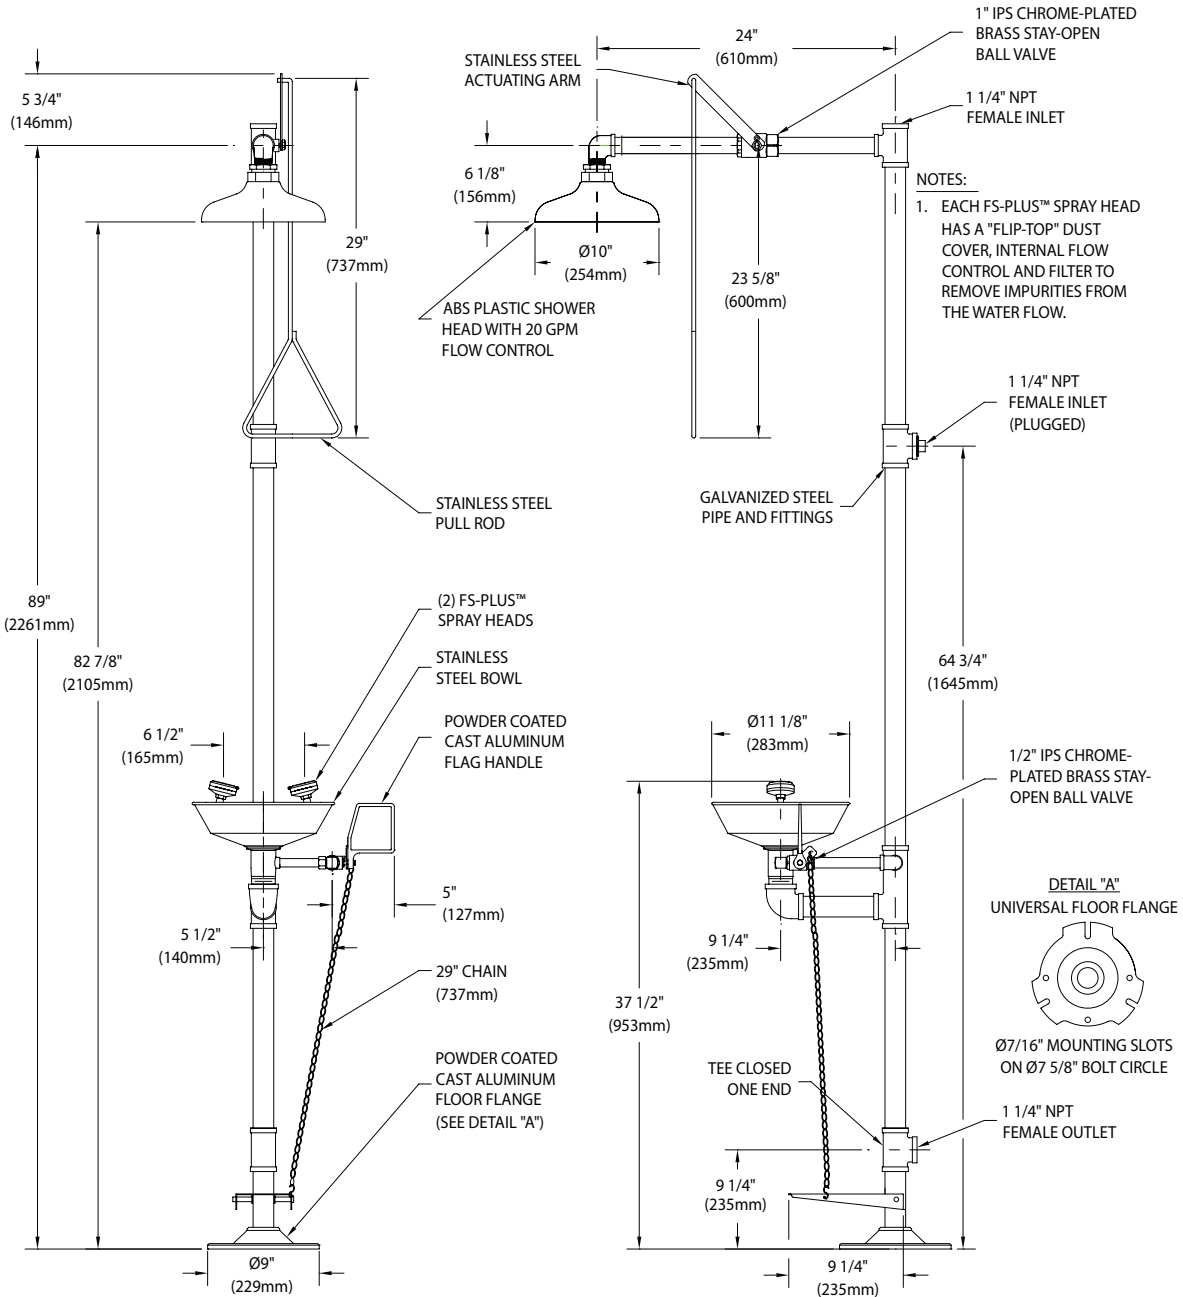

Rev. 022618

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 1/4" (6mm). rev. 0522