

### **SS992** Safety Station with Eyewash, All-PVC Construction

**Application:** All-PVC combination eyewash and shower safety station. Unit is constructed entirely of PVC and PVC-coated components for superior corrosion resistance. Ideal for industrial environments where harsh acids or caustics are present. Eyewash features two GS-Plus™ spray-type outlet heads that deliver a flood of water for rinsing eyes.

**Shower Head:** 10" diameter orange ABS plastic with 20 GPM flow control.

**Shower Valve:** 1" IPS PVC-coated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals. Furnished with stainless steel actuating arm and 29" stainless steel pull rod.

**Spray Head Assembly:** Two GS-Plus™ spray heads. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from water flow.

**Eyewash Bowl:** 11-3/4" diameter orange ABS plastic.

**Eyewash Valve:** 1/2" IPS PVC-coated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals.

**Pipe and Fittings:** Schedule 80 PVC.

**Supply:** 2" IPS socket weld top female inlet.

**Waste:** 2" IPS socket weld female outlet.

**Sign:** ANSI-compliant identification sign.


**Quality Assurance:** Valve and spray head assemblies are factory assembled and water tested prior to shipment.

### Available Options

- TM6040** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product information.
- GRN** Green ABS plastic shower head and bowl.
- YEL** Yellow ABS plastic shower head and bowl.
- SSH** Stainless steel shower head.
- AP275-200** Electric flashing light and alarm horn unit for mounting on wall or vertical pipe. Light illuminates and horn sounds when eyewash or shower is activated. Furnished complete with flow switch and mounting hardware.



**SS992** Safety Station with Eyewash, All-PVC Construction

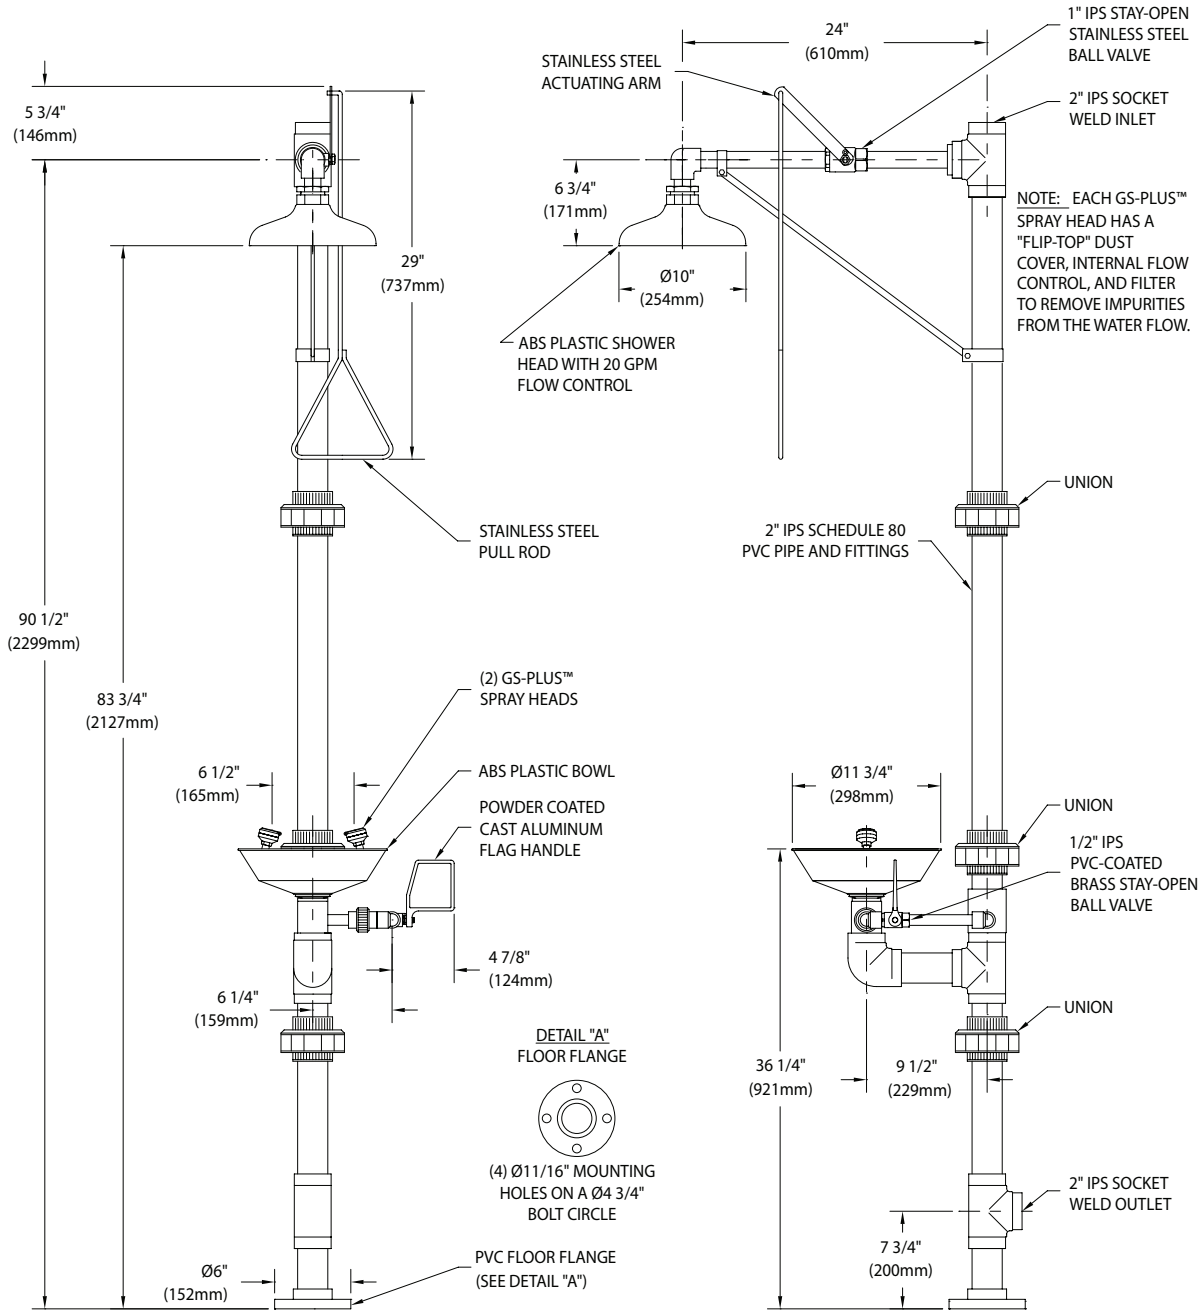

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 1/4" (6mm). rev. 0622