

**BT611BH** Single Water Tap, Bench Mounted, Rigid Gooseneck, Wrist Blade Handle



**Application:** Laboratory water tap for cold water.

**Mounting:** Bench or countertop mounted with locator pins.

**Body:** Forged brass.

**Headwork:** WaterSaver self-contained compression valve cartridge with replaceable stainless steel seat.


**Handle:** Forged brass wrist blade handle with color coded index disc. Index disc is marked per EN 13792.

**Gooseneck:** 150mm (6") rigid gooseneck. Gooseneck is set in right hand configuration unless left hand or 180° is specified.

**Inlet:** Furnished with G1/2 mounting shank, locknut and washer. G1/2 male inlet.

**Outlet:** G3/8 female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Fitting is fully assembled and factory tested prior to shipment. 10 bar (150 PSI) test pressure and maximum working pressure.

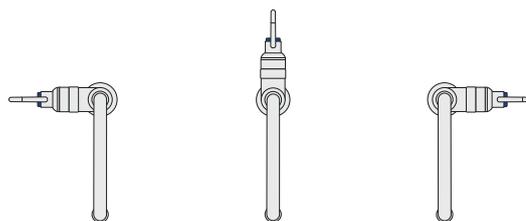

BT611BH-LH

BT611BH-180

BT611BH

**Ordering Information**

**Options**

<b>Valve Construction</b>	Compression valve cartridge	<input type="checkbox"/> BT611BH
	Ceramic disc valve cartridge	<input type="checkbox"/> BTC611BH
<b>Gooseneck</b>	200mm (8") gooseneck in place of 150mm (6")	<input type="checkbox"/> BT611-8BH
<b>Outlet Fitting</b>	BO055 aerator in place of hose end	<input type="checkbox"/> BT621
	BT118 pipe interrupter fitting with hose end	<input type="checkbox"/> BT611-118BH

**Product Finish**


<input type="checkbox"/> WHT	Gloss white powder coated finish	<input type="checkbox"/> PCL	Polished chrome plated finish with clear epoxy coating
<input type="checkbox"/> GRY	Gloss light gray powder coated finish	<input type="checkbox"/> SCC	Satin chrome plated finish with clear epoxy coating
<input type="checkbox"/> GRD	Gloss dark gray powder coated finish	<input type="checkbox"/> SNC	Satin nickel plated finish with clear epoxy coating
<input type="checkbox"/> STM	Starburst metallic powder coated finish		

**Note:** Refer to "Product Finishes" catalog for complete information on finishes.

**Media**

\_\_\_\_\_

**BT611BH** Single Water Tap, Bench Mounted, Rigid Gooseneck, Wrist Blade Handle

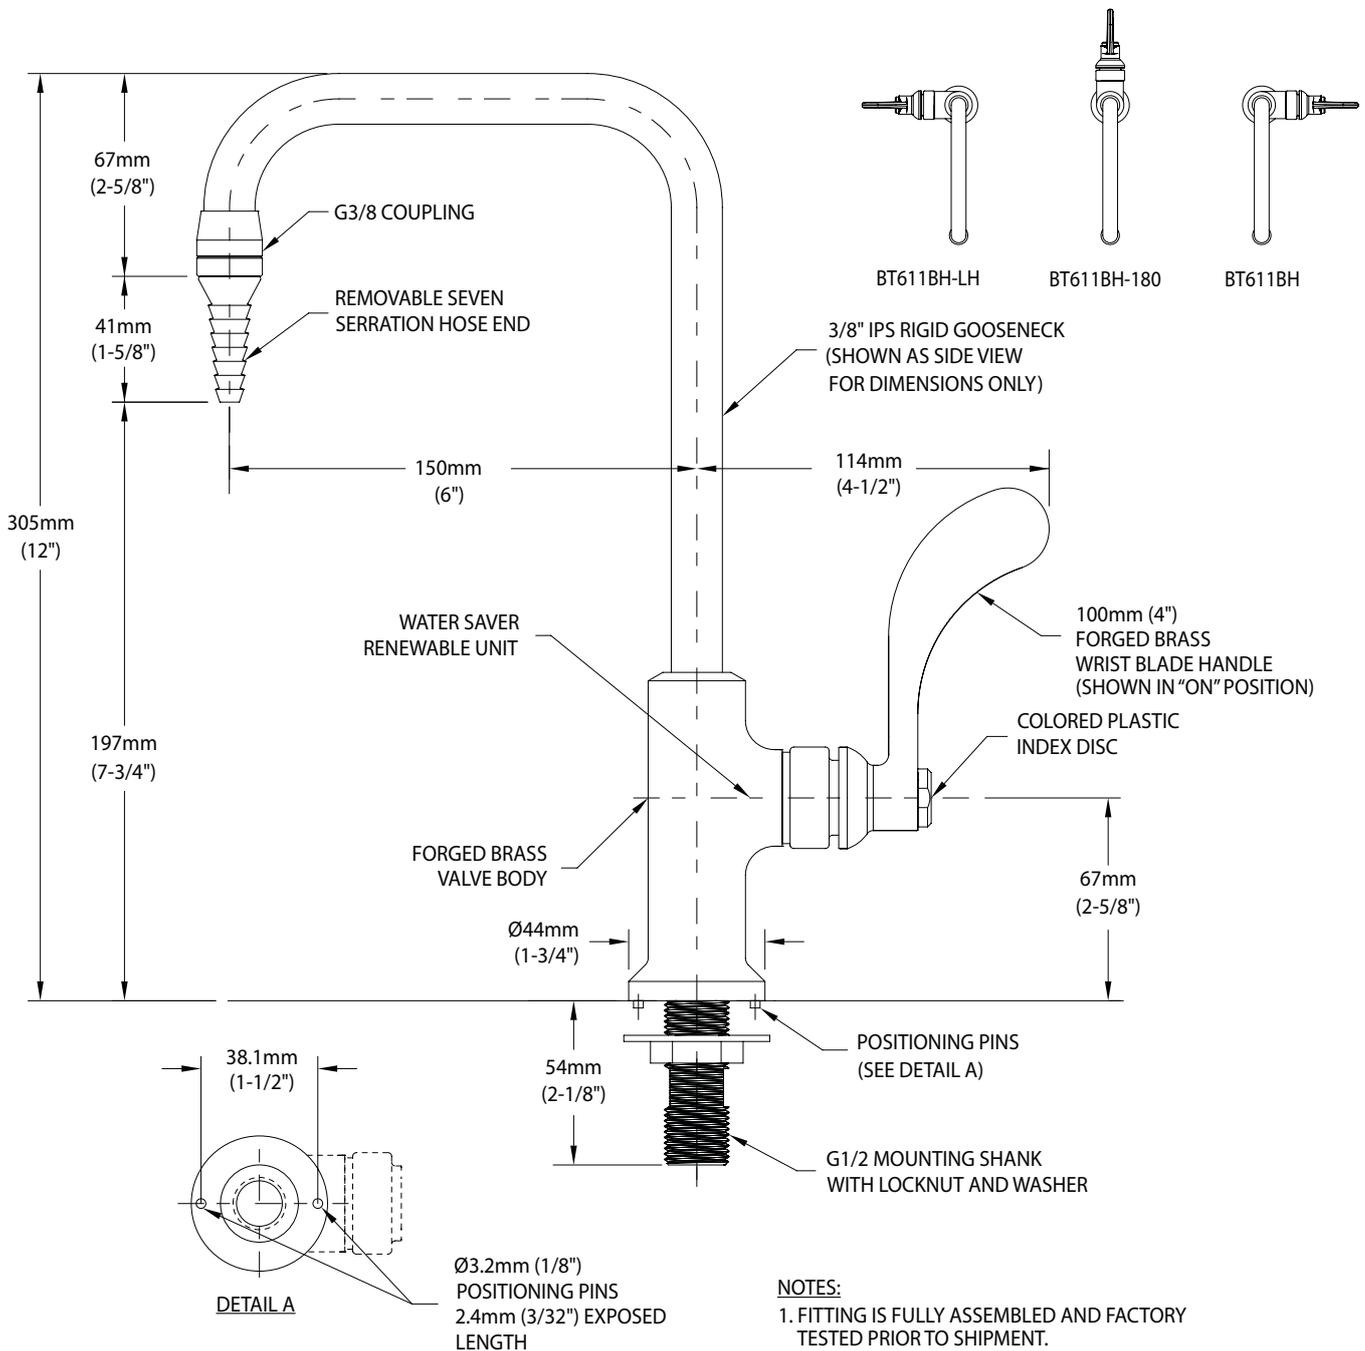

Rev. 031819

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 6mm (1/4"). Rev. 031819