

BTVR380 Single Water Tap, Bench Mounted, Vandal-Resistant Construction



Application: Laboratory water tap for cold water. Tap has heavy duty construction to withstand bending, breakage and disassembly. All threaded connections are secured with cement.

Mounting: Bench or countertop mounted with locator pins.

Body: Forged brass.

Headwork: WaterSaver self-contained compression valve cartridge with replaceable stainless steel seat. Packing nut is secured with set screw to prevent removal.

Handle: Molded nylon hooded style handle with index disc. Handle and index are color coded and marked per EN 13792. Index disc is cemented in place.

Riser: Brass riser with 150mm (6") spread. Riser is 1/2" IPS heavy wall pipe to resist bending and breakage.

Inlet: Furnished with G1/2 mounting shank, locknut and washer. G1/2 male inlet.

Outlet: G3/8 female outlet with anti-splash serrated hose end. Hose end has internal check valve to prevent backflow. Hose end is secured with set screw to prevent removal.

Quality Assurance: Fitting is fully assembled and factory tested prior to shipment. 10 bar (150 PSI) test pressure and maximum working pressure.

Ordering Information

Options

Valve Construction	Compression valve cartridge	<input type="checkbox"/> BTVR380
	Ceramic disc valve cartridge	<input type="checkbox"/> BTVRC380
Riser	Riser with 200mm (8") spread in place of 150mm (6")	<input type="checkbox"/> BTVR380-8
Outlet Fitting	BO055VR aerator in place of hose end	<input type="checkbox"/> BTVR380-55
	BT118 pipe interrupter fitting with hose end	<input type="checkbox"/> BTVR380-118


Product Finish

<input type="checkbox"/> WHT	Gloss white powder coated finish	<input type="checkbox"/> PCL	Polished chrome plated finish with clear epoxy coating
<input type="checkbox"/> GRY	Gloss light gray powder coated finish	<input type="checkbox"/> SCC	Satin chrome plated finish with clear epoxy coating
<input type="checkbox"/> GRD	Gloss dark gray powder coated finish	<input type="checkbox"/> SNC	Satin nickel plated finish with clear epoxy coating
<input type="checkbox"/> STM	Starburst metallic powder coated finish		

Note: Refer to "Product Finishes" catalog for complete information on finishes.

Media

BTVR380 Single Water Tap, Bench Mounted, Vandal-Resistant Construction

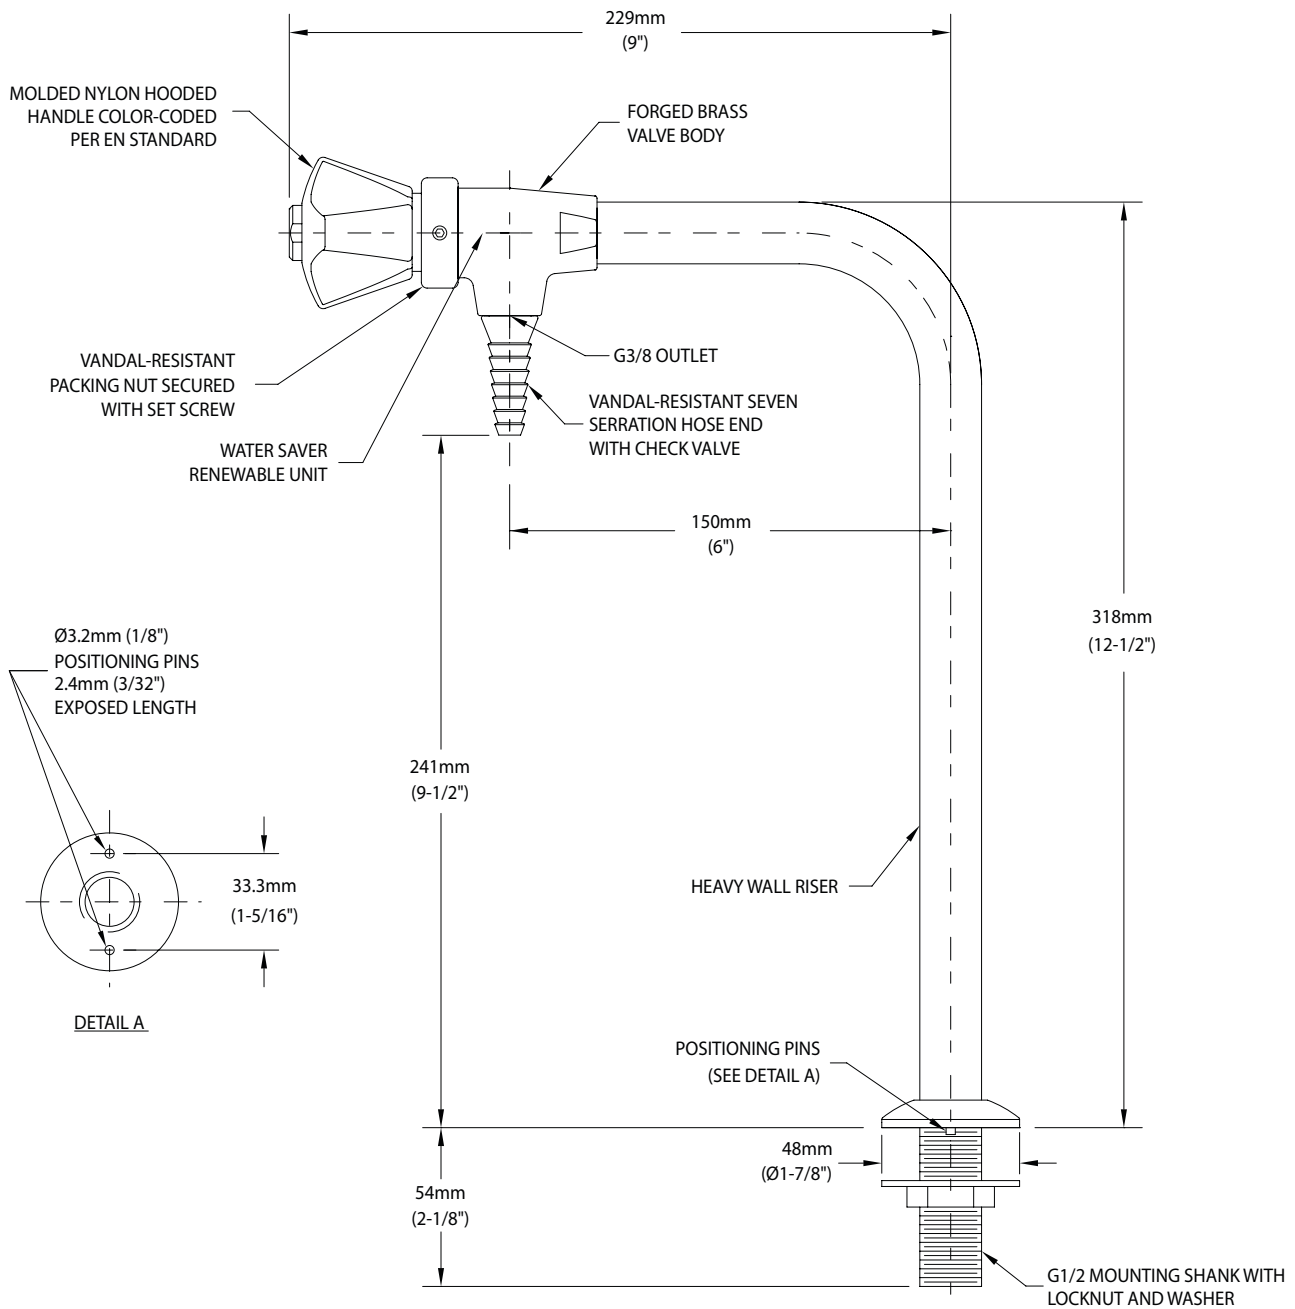

NOTES:

1. FITTING IS FULLY ASSEMBLED AND FACTORY TESTED PRIOR TO SHIPMENT.
2. MAXIMUM WORKING PRESSURE IS 10 BAR (150 PSI).
3. ALL THREADED CONNECTIONS ARE SECURED WITH SET SCREWS OR CEMENT.

Rev. 122818

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are $\pm 6\text{mm}$ (1/4"). Rev. 080318