

BTVR611 Single Water Tap, Bench Mounted, Vandal-Resistant Construction



Application: Laboratory water tap for cold water. Tap has heavy duty construction to withstand bending, breakage and disassembly. All threaded connections are secured with cement.

Mounting: Bench or countertop mounted with locator pins.

Body: Forged brass.

Headwork: WaterSaver self-contained compression valve cartridge with replaceable stainless steel seat. Packing nut is secured with set screw to prevent removal.

Handle: Molded nylon hooded style handle with index disc. Handle and index are color coded and marked per EN 13792. Index disc is cemented in place.

Gooseneck: 150mm (6") rigid gooseneck. Gooseneck riser is 1/2" IPS heavy wall pipe to resist bending and breakage. Gooseneck is set in right hand configuration unless left hand or 180° is specified.

Inlet: Furnished with G1/2 mounting shank, locknut and washer. G1/2 male inlet.

Outlet: G3/8 female outlet with anti-splash serrated hose end. Hose end has internal check valve to prevent backflow. Hose end is secured with set screw to prevent removal.

Quality Assurance: Fitting is fully assembled and factory tested prior to shipment. 10 bar (150 PSI) test pressure and maximum working pressure.

Ordering Information

Options

| | | |
|---------------------------|--|--------------------------------------|
| Valve Construction | Compression valve cartridge | <input type="checkbox"/> BTVR611 |
| | Ceramic disc valve cartridge | <input type="checkbox"/> BTVRC611 |
| Gooseneck | 200mm (8") gooseneck in place of 150mm (6") | <input type="checkbox"/> BTVR611-8 |
| Outlet Fitting | BO055VR aerator in place of hose end | <input type="checkbox"/> BTVR611-55 |
| | BT118 pipe interrupter fitting with hose end | <input type="checkbox"/> BTVR611-118 |


Product Finish

| | | | |
|------------------------------|---|------------------------------|--|
| <input type="checkbox"/> WHT | Gloss white powder coated finish | <input type="checkbox"/> PCL | Polished chrome plated finish with clear epoxy coating |
| <input type="checkbox"/> GRY | Gloss light gray powder coated finish | <input type="checkbox"/> SCC | Satin chrome plated finish with clear epoxy coating |
| <input type="checkbox"/> GRD | Gloss dark gray powder coated finish | <input type="checkbox"/> SNC | Satin nickel plated finish with clear epoxy coating |
| <input type="checkbox"/> STM | Starburst metallic powder coated finish | | |

Note: Refer to "Product Finishes" catalog for complete information on finishes.

Media

BTVR611 Single Water Tap, Bench Mounted, Vandal-Resistant Construction

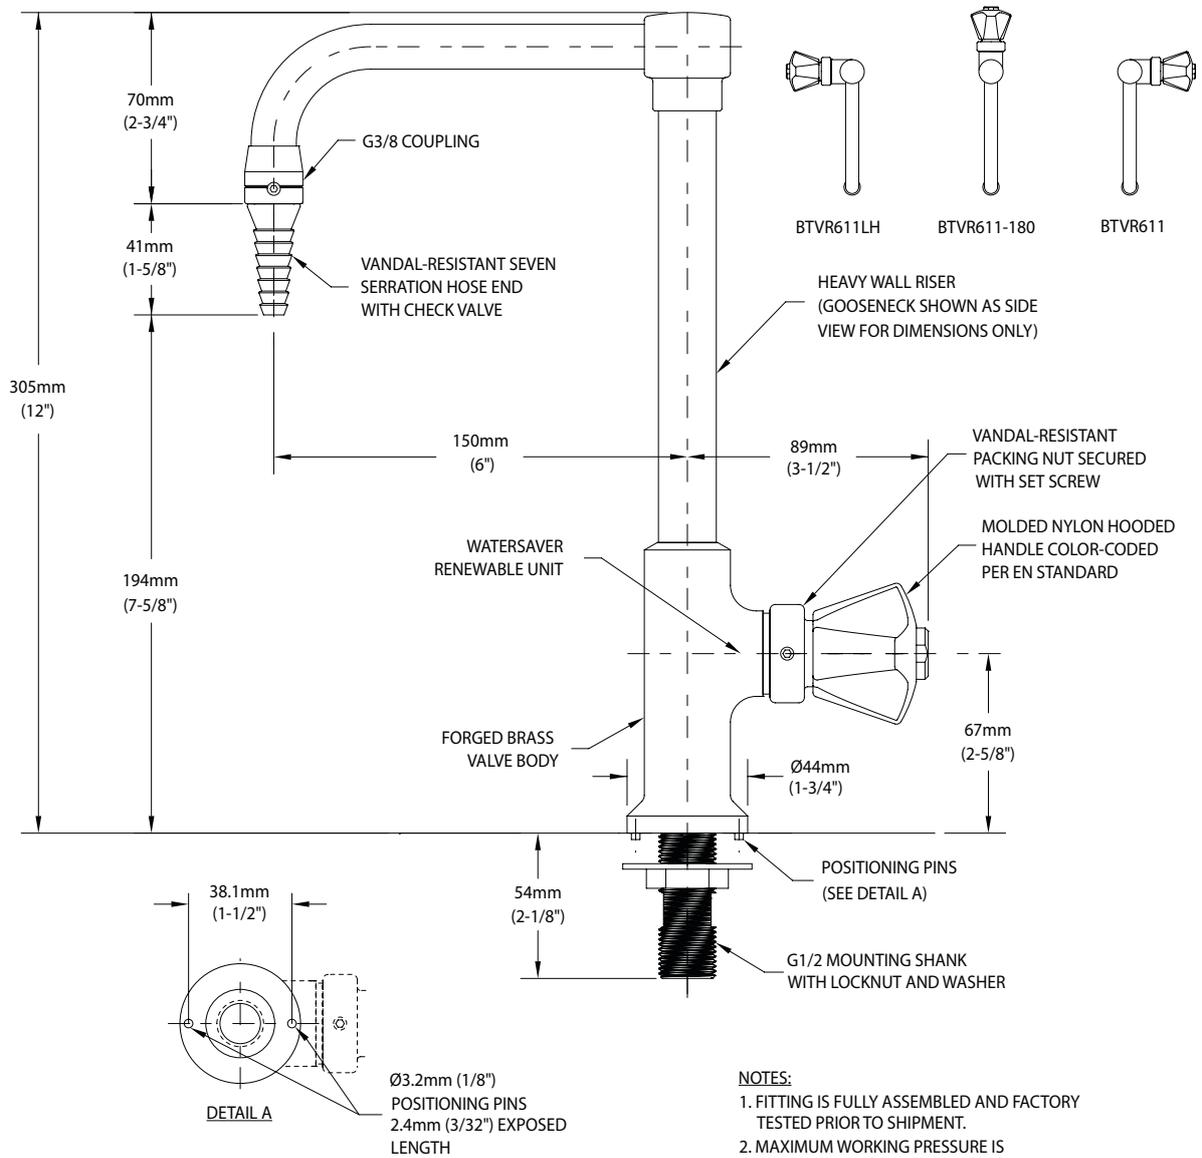

Rev. 031819

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 6mm (1/4"). Rev. 031819