

- ☐ **EW1026** Eyewash/Drench Hose Unit, Wall Mounted
- ☐ **EW1026BP** Eyewash/Drench Hose Unit, Wall Mounted, with Backflow Preventer

Application: Dual purpose eyewash/drench hose for wall mounting. Unit meets the provisions of ANSI Z358.1-2014 as both an eyewash and a drench hose. Unit may be left in the mounting bracket for use as a fixed eyewash, leaving user's hands free. Alternatively, unit may be removed for use as a drench hose to rinse any part of user's eyes, face or body.

Spray Head Assembly: Two GS-Plus™ spray heads mounted side-by-side. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from the water flow.

Valve: Forged brass squeeze valve activated by stainless steel lever handle. Valve has replaceable stainless steel seat for exceptional durability. Locking clip engages when handle is depressed, providing "hands free" operation. Valve stays open until locking clip is released.

Hose: 8' reinforced PVC hose. 275 PSI maximum working pressure.

Mounting: Bracket with spring clips to hold unit on wall. Clips position spray heads and handle to face forward at all times.

Backflow Preventer: In-line dual check backflow preventer installed on inlet of hose (EW1026BP only). ASSE 1024 Listed.
Note: Check with code authority for compliance with local plumbing code.

Supply: 3/8" NPT male swivel-type inlet.

Sign: ANSI-compliant identification sign.


Quality Assurance: Unit is completely assembled and water tested prior to shipment.

Available Options

- ☐ **TM6020** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product selection information.
- ☐ **FSH** 8 ft. flexible stainless steel hose in place of PVC hose.
- ☐ **VB** In-line vacuum breaker for installation between valve and spray head.



- ☐ **EW1026** Eyewash/Drench Hose Unit, Wall Mounted
- ☐ **EW1026BP** Eyewash/Drench Hose Unit, Wall Mounted, with Backflow Preventer

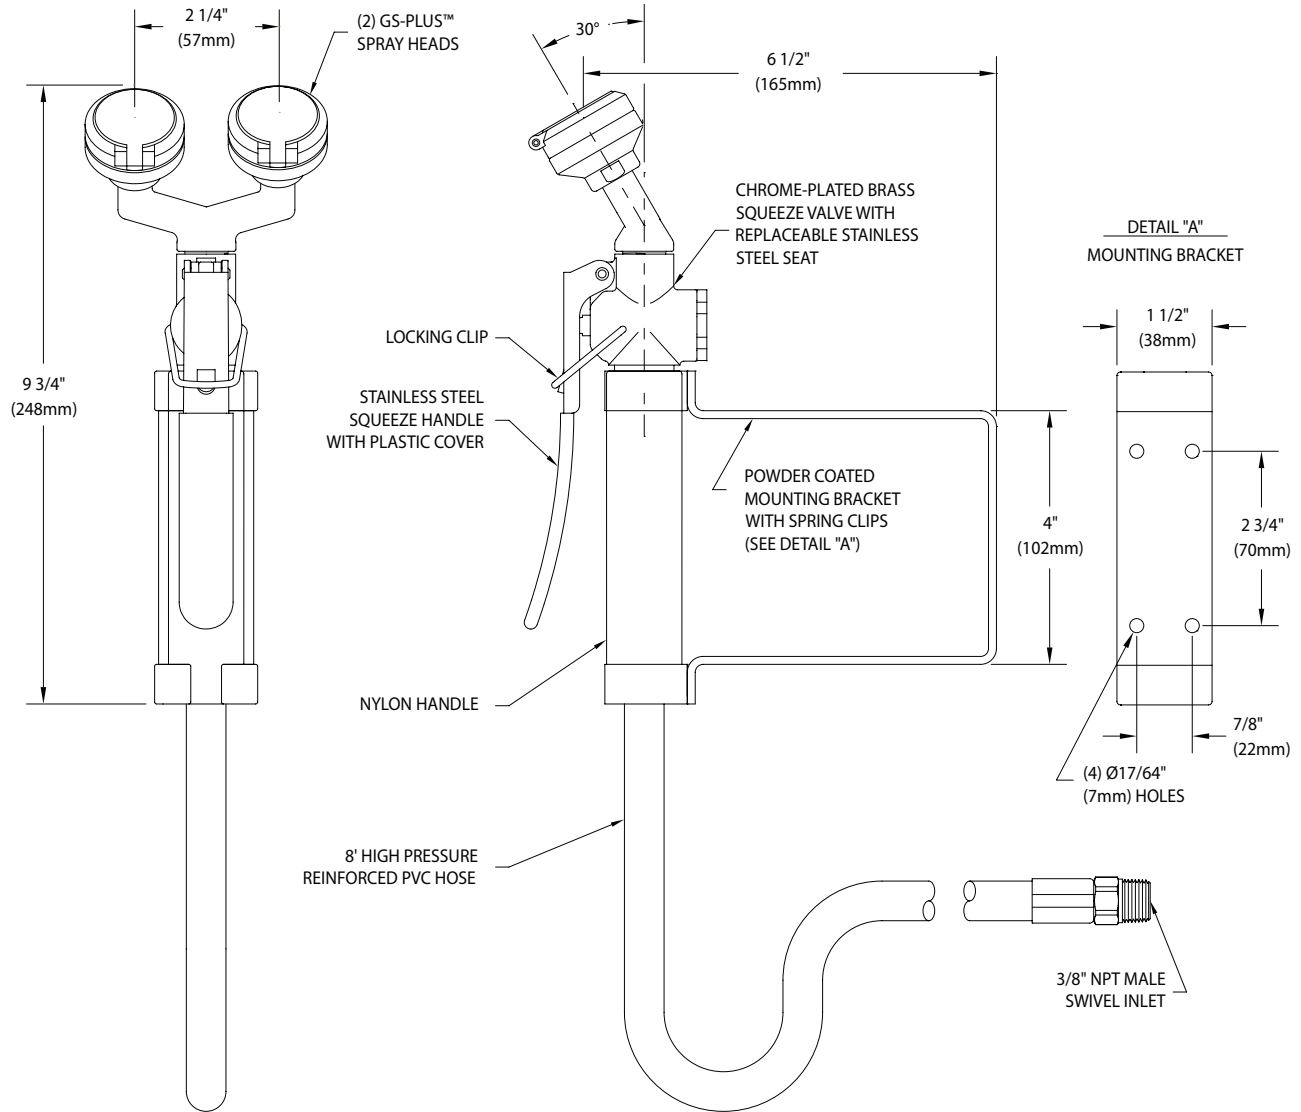

NOTES:

1. EACH GS-PLUS™ SPRAY HEAD HAS A "FLIP-TOP" DUST COVER, INTERNAL FLOW CONTROL AND FILTER TO REMOVE IMPURITIES FROM THE WATER FLOW.
2. HOSE SHOULD NOT BE USED IN APPLICATIONS WHERE WATER PRESSURE EXCEEDS 90 PSI. HOSE SHOULD BE INSPECTED PERIODICALLY FOR DETERIORATION.

Rev. 102918

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are $\pm 1/4"$ (6mm). Rev. 0622

Sign Included

