

☐ **FE780** Eye/Face Wash, Wall Mounted, PVC Construction with Stainless Steel Valve



Application: Eye/face wash for wall mounting. Unit is constructed of PVC, PVC-coated components and a stainless steel valve for superior corrosion resistance. Ideal for use in industrial environments where harsh acids or caustics are present. Two large FS-Plus™ spray-type outlet heads deliver a flood of water for rinsing eyes and face.

Spray Head Assembly: Two FS-Plus™ spray heads. Each head has a “flip top” dust cover, internal flow control and filter to remove impurities from the water flow.

Valve: 1/2” IPS Type 316 stainless steel stay-open ball valve. Valve has stainless steel ball and PTFE seals.

Bowl: 11-3/4” diameter orange ABS plastic.

Mounting: Heavy duty PVC wall bracket.

Supply: 1/2” NPT female inlet.

Waste: 1-1/2” socket weld female outlet.

Sign: ANSI-compliant identification sign.

Quality Assurance: Unit is completely assembled and water tested prior to shipment.

Available Options


☐ **TM6020** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to “Thermostatic Mixing Valves” section for complete technical and product selection information.

☐ **GRN** Green ABS plastic bowl.

☐ **YEL** Yellow ABS plastic bowl.



FE780 Eye/Face Wash, Wall Mounted, PVC Construction with Stainless Steel Valve

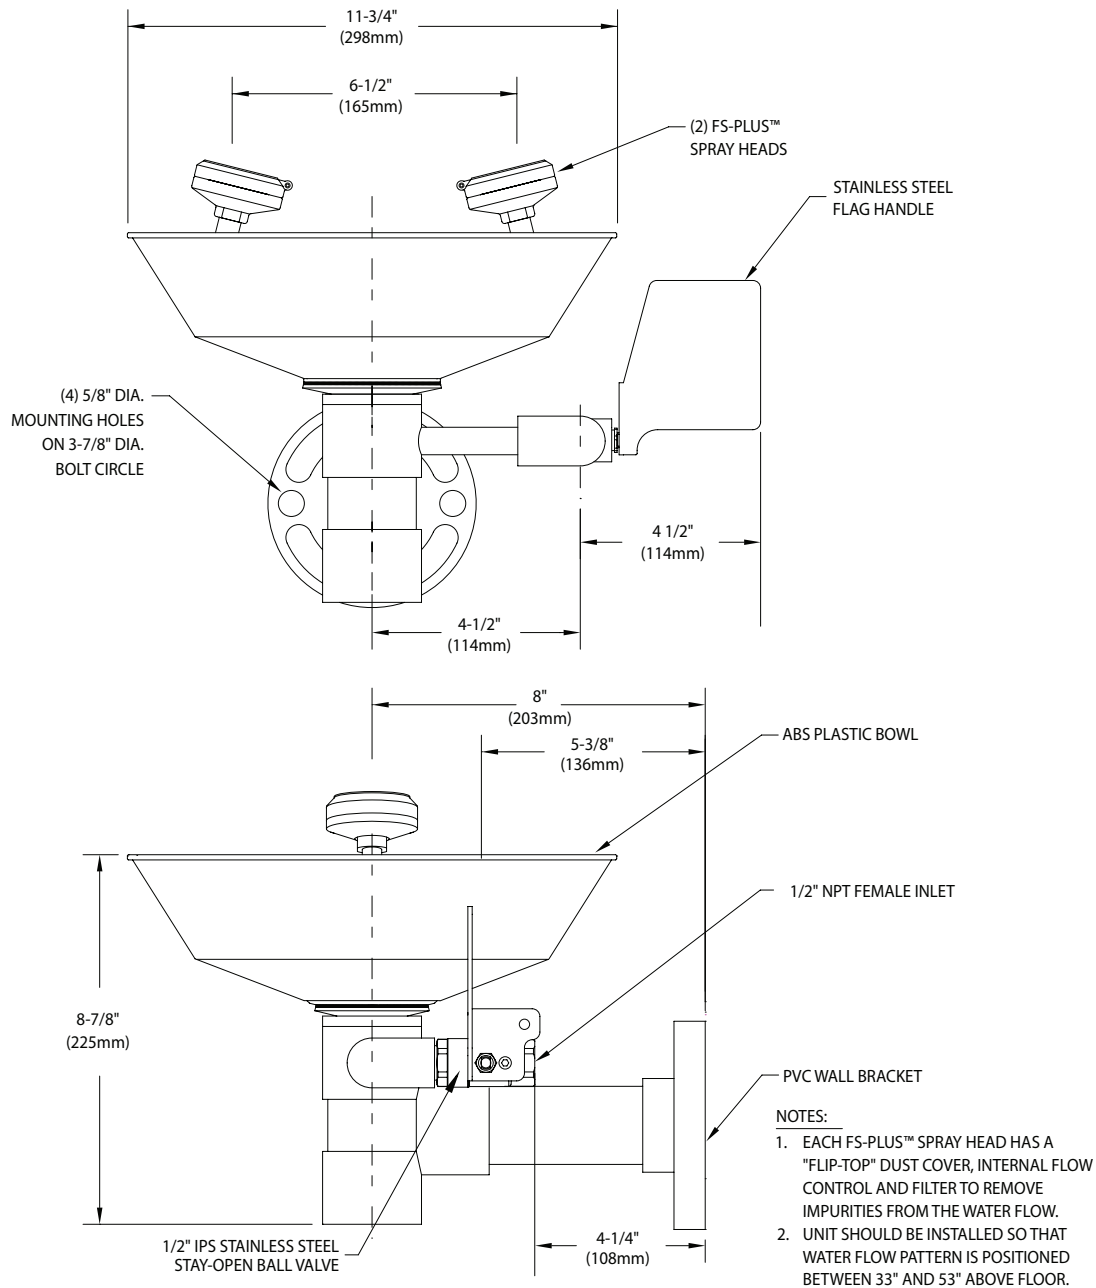

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are $\pm 1/4"$ (6mm). rev. 031023