

☐ **SS998** Safety Station with WideArea™ Eye/Face Wash, PVC Construction with Stainless Steel Valves

Application: All-PVC combination WideArea™ eye/face wash and shower safety station. Unit is constructed of PVC, PVC-coated components and stainless steel valves for superior corrosion resistance. Ideal for industrial environments where harsh acids or caustics are present. Eye/face wash features four GS-Plus™ spray-type outlet heads that deliver a flood of water over a wide area of coverage for complete rinsing of eyes and face.

Shower Head: 10" diameter orange ABS plastic with 20 GPM flow control.

Shower Valve: 1" IPS Type 316 stainless steel stay-open ball valve. Valve has stainless steel ball and PTFE seals. Furnished with stainless steel actuating arm and 29" stainless steel pull rod.

Spray Head Assembly: Four GS-Plus™ spray heads. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from water flow.

Eye/Face Wash Bowl: 11-3/4" diameter orange ABS plastic.

Eye/Face Wash Valve: 1/2" IPS Type 316 stainless steel stay-open ball valve. Valve has stainless steel ball and PTFE seals.

Pipe And Fittings: Schedule 80 PVC.

Supply: 2" IPS socket weld top female inlet.

Waste: 2" IPS socket weld female outlet.

Sign: ANSI-compliant identification sign.


Quality Assurance: Valve and spray head assemblies are factory assembled and water tested prior to shipment.

Available Options

- ☐ **TM6040** Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product selection information.
- ☐ **GRN** Green ABS plastic shower head and bowl.
- ☐ **YEL** Yellow ABS plastic shower head and bowl.
- ☐ **AP275-200** Electric flashing light and alarm horn unit for mounting on wall or vertical pipe. Light illuminates and horn sounds when eye/face wash or shower is activated. Furnished complete with flow switch and mounting hardware.
- ☐ **AP250-015** Modesty curtain for mounting on safety station.



SS998 Safety Station with WideArea™ Eye/Face Wash, PVC Construction with Stainless Steel Valves

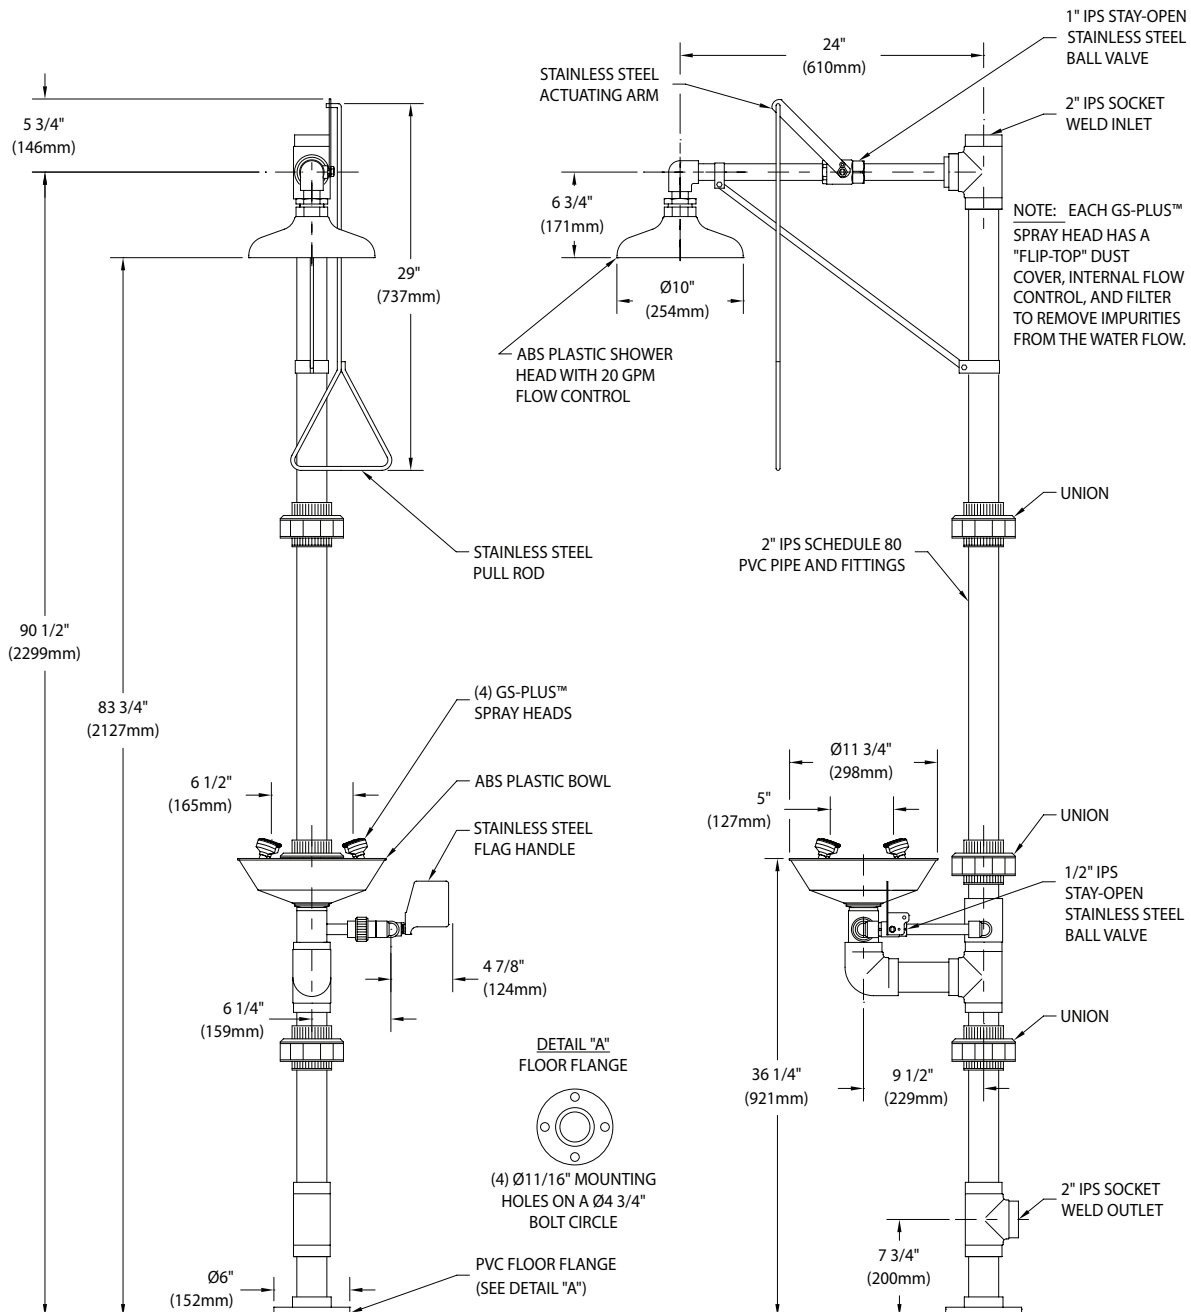

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are $\pm 1/4"$ (6mm). rev. 021023