

### ☐ **ESBF671** Recessed Emergency Shower, Recess Mounted Shower Head

**Application:** Recessed emergency shower with ceiling mounted recessed shower head. Recessed shower conserves valuable floor space, while eliminating the clutter and obstruction created by conventional shower equipment. Unit can be installed in either a corridor or a lab room, close to where accidents might occur.

**ADA Compliance:** When installed at recommended mounting heights, unit complies with ADA requirements for accessibility by handicapped persons.

**Shower Head:** 11-3/4" diameter stainless steel with 20 GPM flow control and flange for flush mounting in ceiling.

**Valve:** 1" IPS brass stay-open ball valve with stainless steel "panic bar." Pulling bar down activates shower; shower remains in operation until bar is returned to original closed position. Furnished with stainless steel access panel and 1" IPS unions for valve.

**Mounting:** 16 gauge stainless steel cabinet with flange featuring 3/8" return for recessed mounting in wall.

**Supply:** 1" NPT female inlet.

**Sign:** ANSI-compliant identification sign.

**U.S. Patent 5,768,721**

**NOTE:** ANSI Z358.1-2014 specifies that shower heads be installed no more than 96" above the finished floor. This unit should therefore not be installed in ceilings over 8 feet. For higher ceiling heights, we recommend either the ESBF670 or ESBF672 showers.

#### Available Options


- ☐ **AP250-065** Modesty curtain for wall mounting.
- ☐ **AP280-235** Electric strobe light and alarm horn unit for recess mounting in finished wall. Light illuminates and horn sounds when shower is activated. Includes additional leads for remote monitoring.
- ☐ **AP280-237** Electric strobe light and alarm horn unit with silencing switch for recess mounting in finished wall. Light illuminates and horn sounds when shower is activated. Includes additional leads for remote monitoring.
- ☐ **TM6040** Thermostatic mixing valve precisely blends hot and cold water to deliver warm (tepid) water as required by ANSI Z358.1-2014. Refer to "Tempering Valves" section for complete technical and product selection information.



Note: Shown with optional AP280-235 electric light and alarm horn unit (sold separately).



### □ ESBF671 Recessed Emergency Shower, Recess Mounted Shower Head

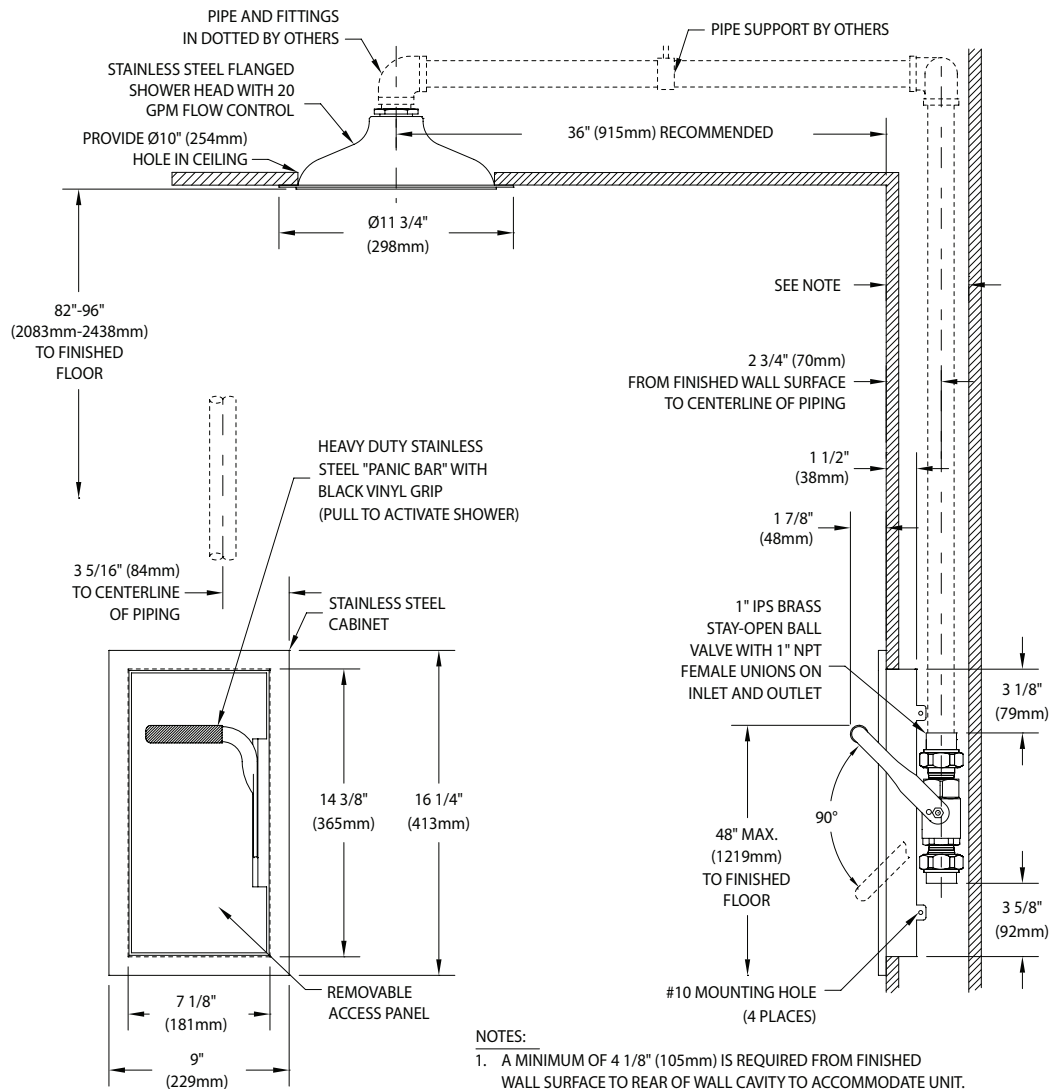

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are  $\pm 1/4"$  (6mm). rev. 021920

