

☐ **SSBF2173** Recessed Safety Station with Drain Pan and Daylight Drain, Surface Mounted

Application: Barrier-free eye/face wash and shower safety station for surface mounting. Unit is ideal for use on concrete masonry unit (CMU) and other walls that cannot be penetrated. Unit has exposed shower head and swing-down eye/face wash with drain pan. Stainless steel cover provides attractive appearance and protects unit when not in use. When activated, cover serves as pan to collect waste water and return it into unit for drainage. Rather than connecting to building drainage system, unit has 1" IPS stainless steel drain on front of unit for waste water. Front drain eliminates need for connection to drainage system while facilitating regular testing of unit.

ADA Compliance: When installed at recommended mounting heights, unit complies with ADA requirements for accessibility by handicapped persons.

Shower Head: 10" diameter stainless steel with 20 GPM flow control.

Shower Valve: 1" IPS brass stay-open ball valve with stainless steel "panic bar" actuator.

Cover/Drain Pan: 16 gauge stainless steel combination cover and drain pan. Grasping "panic bar" handle and opening cover pulls spray head assembly down from vertical to horizontal position, activating water flow. While unit is in operation, waste water is collected in drain pan and re-directed to daylight drain for drainage out the front of unit. Unit remains in operation until cover is returned to closed position.

Eye/Face Wash Spray Head Assembly: Two FS-Plus™ spray heads mounted on supply arms. Each spray head has individually adjustable flow control and filter to remove impurities from water flow.

Eye/Face Wash Valve: 1/2" IPS brass plug-type valve with O-ring seals. Furnished with in-line strainer to protect valve from debris and foreign matter.

Mounting: 16 gauge stainless steel cabinet for surface mounting on wall.

Pipe and Fittings: Exposed pipe and fittings are brushed stainless steel.

Supply: 1" NPT female inlet.

Waste: 1" IPS stainless steel drain elbow on front of unit.

Sign: ANSI-compliant identification sign.

Quality Assurance: Unit is completely assembled and water tested prior to shipment.

U.S. Patent 5,768,721

Available Options

- ☐ **PCC** Polished chrome plated brass shower supply nipple.
- ☐ **AP250-018SS** Brushed stainless steel support brace for wall mounted showers. Brace mounts above or below shower.
- ☐ **AP250-065** Modesty Curtain
- ☐ **AP280-240** Electric Light and Alarm Horn
- ☐ **TM6040** Thermostatic Mixing Valve




Note: Shown with optional AP280-240 electric light and alarm horn unit (sold separately).





□ SSBF2173 Recessed Safety Station with Drain Pan and Daylight Drain, Surface Mounted

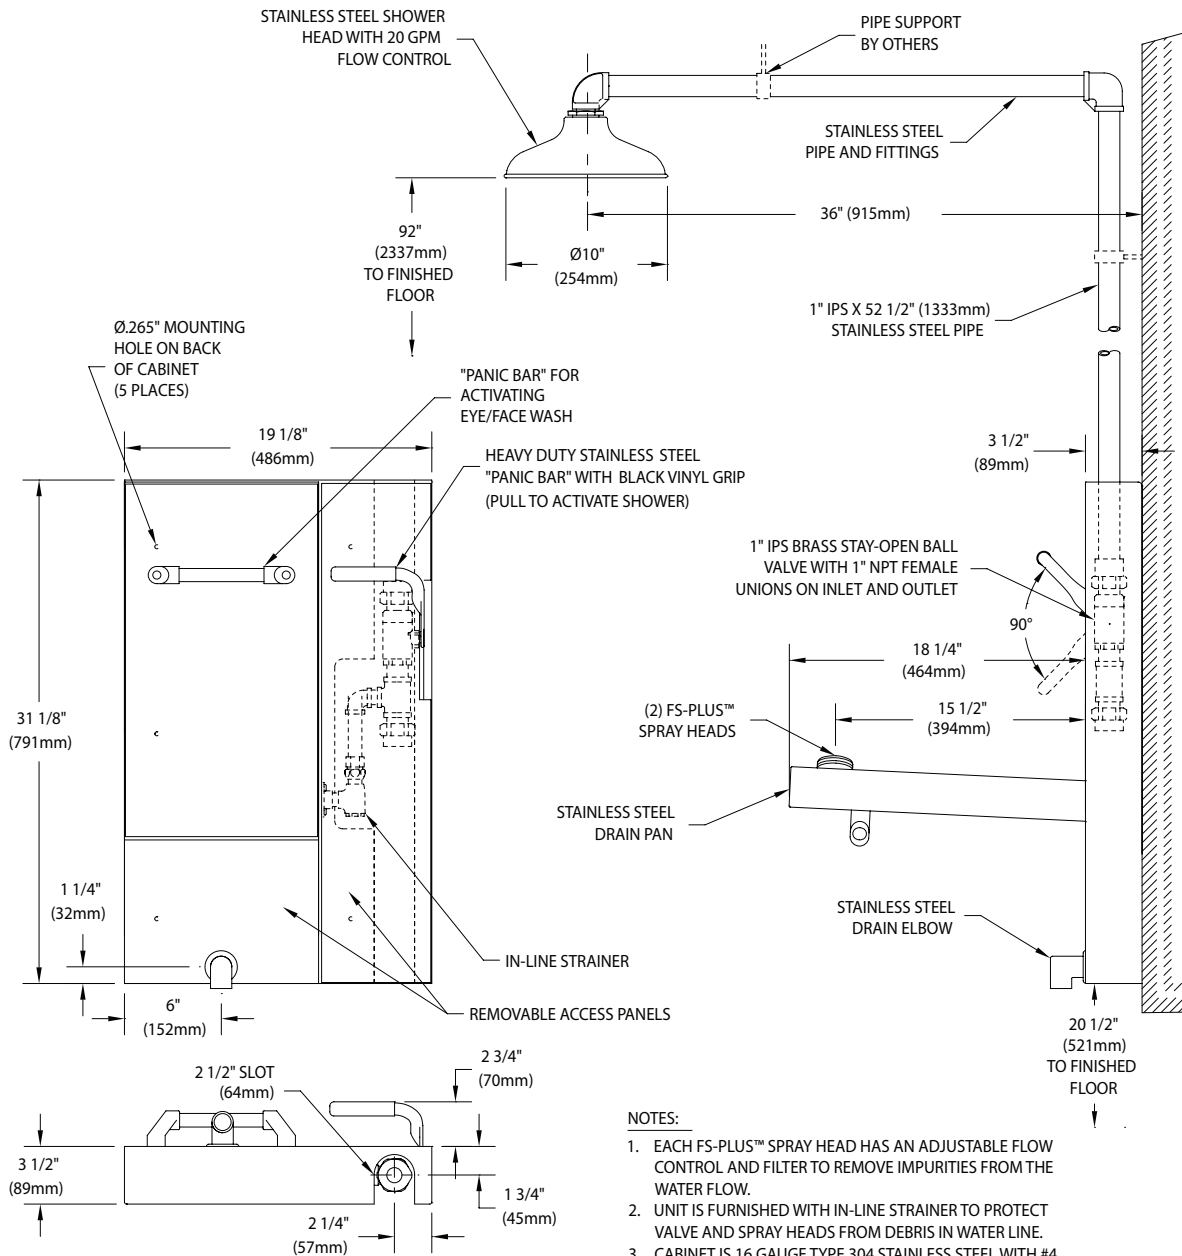

NOTES:

1. EACH FS-PLUS™ SPRAY HEAD HAS AN ADJUSTABLE FLOW CONTROL AND FILTER TO REMOVE IMPURITIES FROM THE WATER FLOW.
2. UNIT IS FURNISHED WITH IN-LINE STRAINER TO PROTECT VALVE AND SPRAY HEADS FROM DEBRIS IN WATER LINE.
3. CABINET IS 16 GAUGE TYPE 304 STAINLESS STEEL WITH #4 BRUSHED SATIN FINISH.

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are $\pm 1/4"$ (6mm). rev. 021920

